AVerTV for Mac

User Manual

Version 2.2

2010-01-21

AVerMedia®

Disclaimer

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright

©2010 by AVerMedia Technologies, Inc. All right reserved.
No part of this document may be reproduced or transmitted in any form, or by any means without the prior written permission of AVerMedia Technologies Inc. AVerMedia Technologies Inc. reserves the right to modify its models, including their characteristics, specifications, accessories and any other information stated herein without notice. The official printout of any information shall prevail should there be any discrepancy between the information contained herein and the information contained in that printout.
"AVerMedia" is a trademark (or registered trademark) of AVerMedia Technologies, Inc. Other trademarks used herein for description purpose only belong to each of their companies.

International Headquarter

Address	No. 135, Jian-Yi Road Chung-Ho City, Taipei County Taiwan
Website	www.avermedia.com/avertv
Telephone	886-2-2226-3630

Table of Contents

Table of Contents i
Introduction 1
Running AVerTV for Mac for the First Time 2
Introducing the User Interface 4
TV Window and Control Panel 4
On-Screen Menu 5
TV / Radio 8
Launching AVerTV for Mac 8
Quitting AVerTV for Mac 8
Scanning Channels 9
Scanning Channels (for Advanced Users) 12
All Frequencies Scan 12
Manually Add Channel 14
Watch TV / Listen to the Radio 16
Switching Channels 16
Selecting a Channel from the Channel List 16
Multi-Channel Preview 17
Activate Multi-Channel Preview 17
Watch TV in the Multi-Channel Preview Mode 17
Multi-Channel Preview Setup 17
TimeShift 19
TimeShift Controls 19
TimeShift Settings 20
Using the EPG Function 21
Preset a Schedule from EPG 22
Other EPG Features 23
Fine Tuning Color of the Display 25
Video Optimizer 25
Using the Overscan function 26
Adjusting Volume 28
Changing Audio Channels 28
Change Signal Source 28
Changing the OSD Attributes 28
Changing Display Aspect Ratio 29

TV Window Controls 30
Always On Top 30
Window Size Settings 30
Personal Video Recorder 32
Record Storage Settings 32
Recording Format Settings 35
Using the Recording Function 35
Schedule Recording 36
Playing the Recorded Programs 39
Setting Playback Repeat Mode 42
Adjusting the seeking interval time 43
Exporting Video and Audio Files 44
Export to iPod Format 44
Export to Toast 45
Upload to YouTube 46
Picture-in-Picture Display 49
Image Capture 51
Capture a TV/Video Image 51
Multiple Image Sequence Capture 51
Other Settings 53
Other Ways to Launch AVerTV for Mac 53
Power Options 53
Application Information 56
Customer Support 56
Teletext 56
Teletext Controls 57
Teletext Mode 59
Closed Caption & Subtitle 63
Using Apple Remote to Control AVerTV 64
Hot Keys 65

Introduction

Thanks for purchasing **AVerTV for Mac**! This powerful application allows you to watch TV, listen to the radio, create slide shows, record favorite programs and enjoy various features on your Mac. Turning your computer system into a media center is just that simple!

This Chapter will introduce the essential information of **AVerTV for Mac** to you. Please do read this chapter carefully before using the application.

Please be noted the functions and images may vary depending on the product you purchased and the area you're living.

Running AVerTV for Mac for the First Time

To launch AVerTV for Mac application, double-click on the AVerTV for Mac icon in the Application folder or in the Dock.

When you run the AVerTV for Mac for the first time, the "Media Box" will automatically appear.

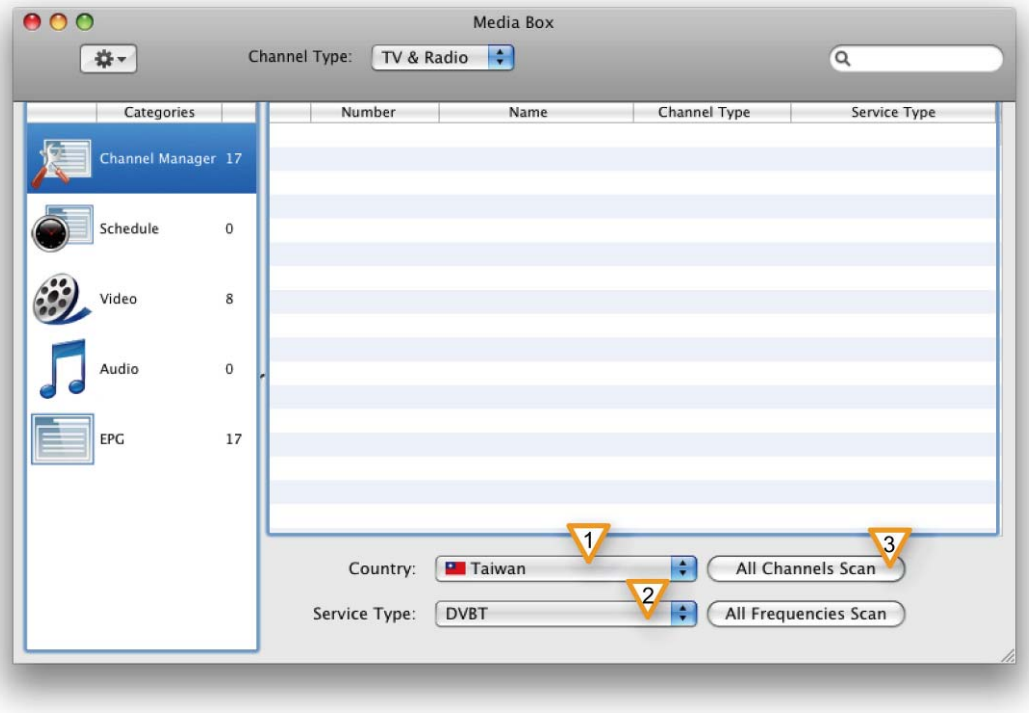

1. From the **Country** drop-down menu, select your country or region.
2. Select an available **Service Type**.
3. Click **All Channels Scan** to start searching channels.

4. If you want to terminate the searching process, just click **Stop.**

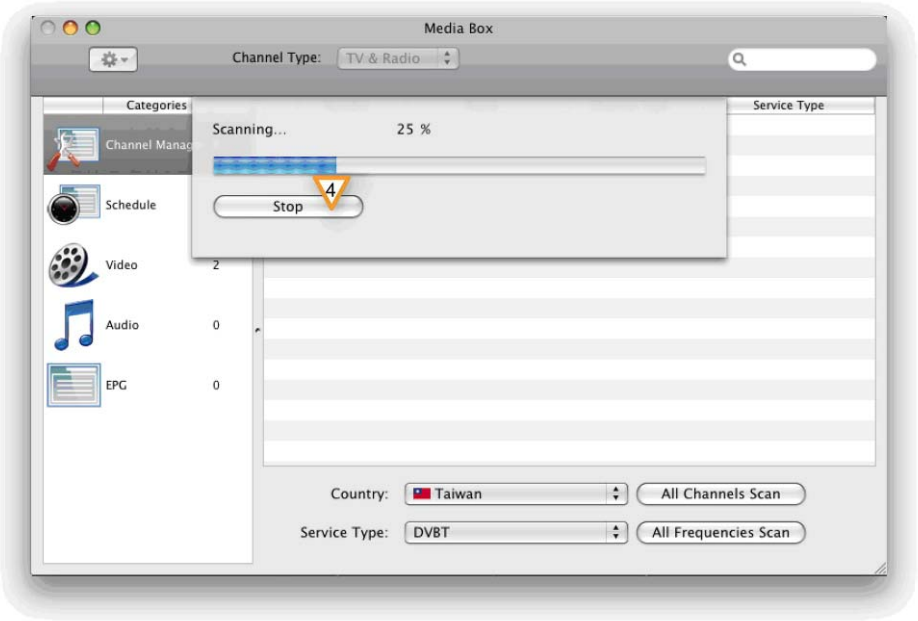

5. After scanning, new active channels/programs are memorized and listed in the right pane of the dialog box.

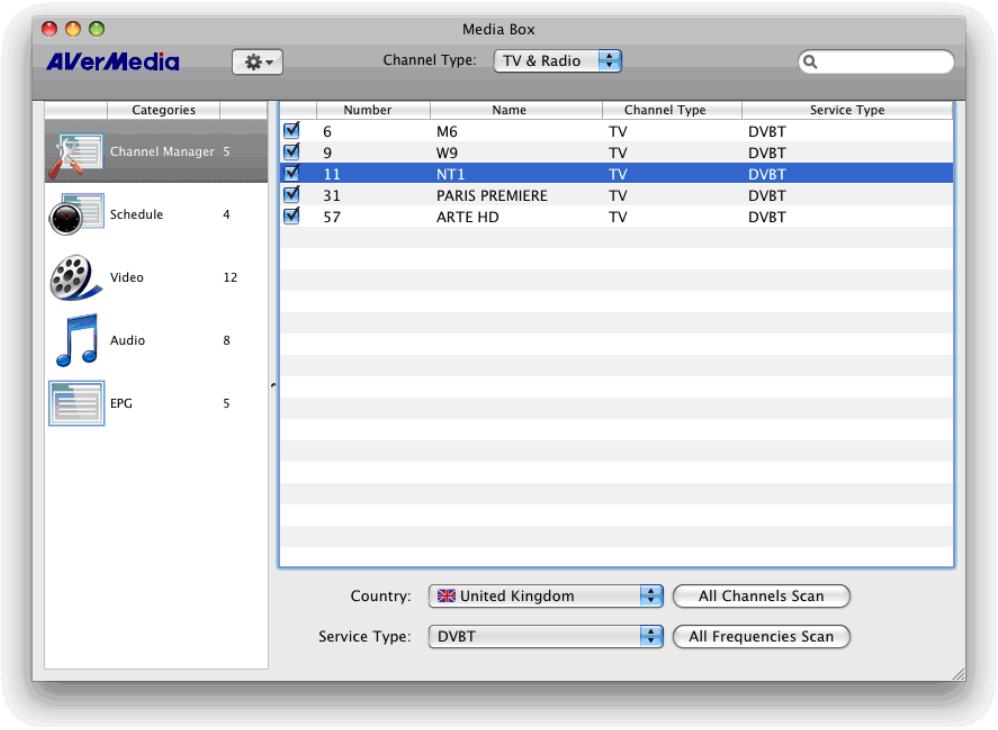

6. Close the "Media Box" window and the TV window appears.

Introducing the User Interface

TV Window and Control Panel

Icons on the Control Panel

1. Volume
2. Rewind / Previous File
3. Pause / Resume / Stop / Play
4. Fast-Forward / Next File
5. TimeShift
6. Record
7. Open On-Screen Menu
8. Full Screen Display
9. Resize Window
10. Channel Down
11. Channel Up

The control panel hides automatically when the mouse cursor moves outside the control panel area and idles for 3 seconds. The control panel re-appears when the mouse, in the display window, is moved again.

On-Screen Menu

The On-Screen Menu provides you more setting options other than the basic controls on the control panel.

Open / Close the On-Screen Menu

On the control panel, click on the icon to open the On-Screen Menu. To close it, click on the icon on the top left corner of the On-Screen menu.

If you are using Apple Remote, please press **MENU** button to open the On-Screen Menu. To close it, just press **MENU** button again.

Enter / Exit from the Submenu

Directly mouse click on the submenu title to enter the submenu. To exit, simply click on the menu title banner on the top.

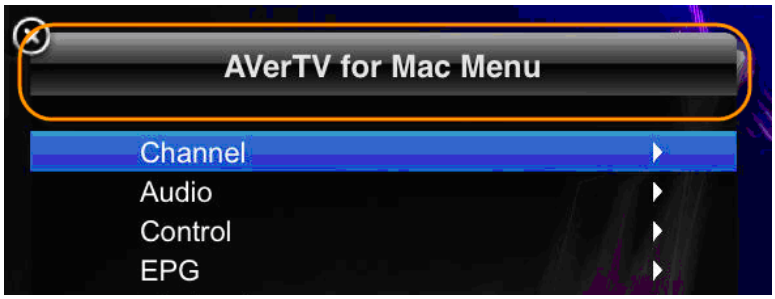

You can use keypad ↑ ↓ to select upward or downward, use keypad → or **Enter** to execute the selection or enter the submenu (if available), and use keypad ← to exit from the submenu.

If you are using **Apple Remote**, use **+** and **-** buttons to select upward or downward, use ▸▸| button to enter the submenu and |◂◂ button to exit from the submenu. Press ▶ II button to execute the selection or enter the submenu (if available).

Use On-Screen Menu

Menu	Description
Channel	Enter the channel list to switch channels.
Audio	Enter the Audio submenu to switch between available audio modes.
Control	Enter the Control submenu to record, TimeShift, snapshot the current program or turn on the closed caption/subtitle/Teletext function.
EPG	Enter the EPG submenu to display the selected program information.
Playback	Enter the Playback submenu to play/stop an existing file or

	enable/disable the PIP function.
Signal Source	Enter the Signal Source submenu to switch between available signal sources.
Window	Enter the Window submenu to adjust the image size to full screen, adjust the image with keep aspect ratio, or enable the Overscan function.
Quick AVerTV for Mac	Close the AVerTV application.

TV / Radio

Launching AVerTV for Mac

To launch AVerTV for Mac application, double-click on the AVerTV for Mac icon in the Application folder or in the Dock.

Quitting AVerTV for Mac

To quit the AVerTV for Mac, you can do it in three ways:

Go to the menu bar and point to **AVerTV>Quit AVerTV for Mac**.

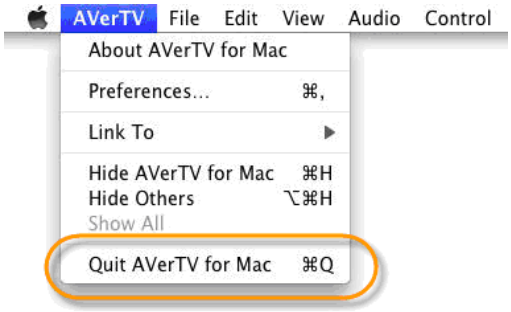

Right click on the AVerTV for Mac icon in the Dock. Select **Quit**.

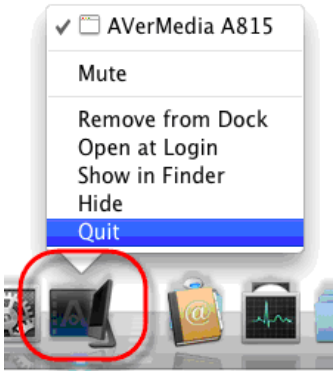

Choose **Quit AVerTV for Mac** in the On-Screen Menu.

The AVerTV for Mac application is NOT completely closed even if you close all AVerTV for Mac windows. To close the application, be sure to use one of the above ways to quit it.

Scanning Channels

If you haven't done channel scanning when you first run the application, or want to re-scan the channels, follow the following steps to complete this procedure.

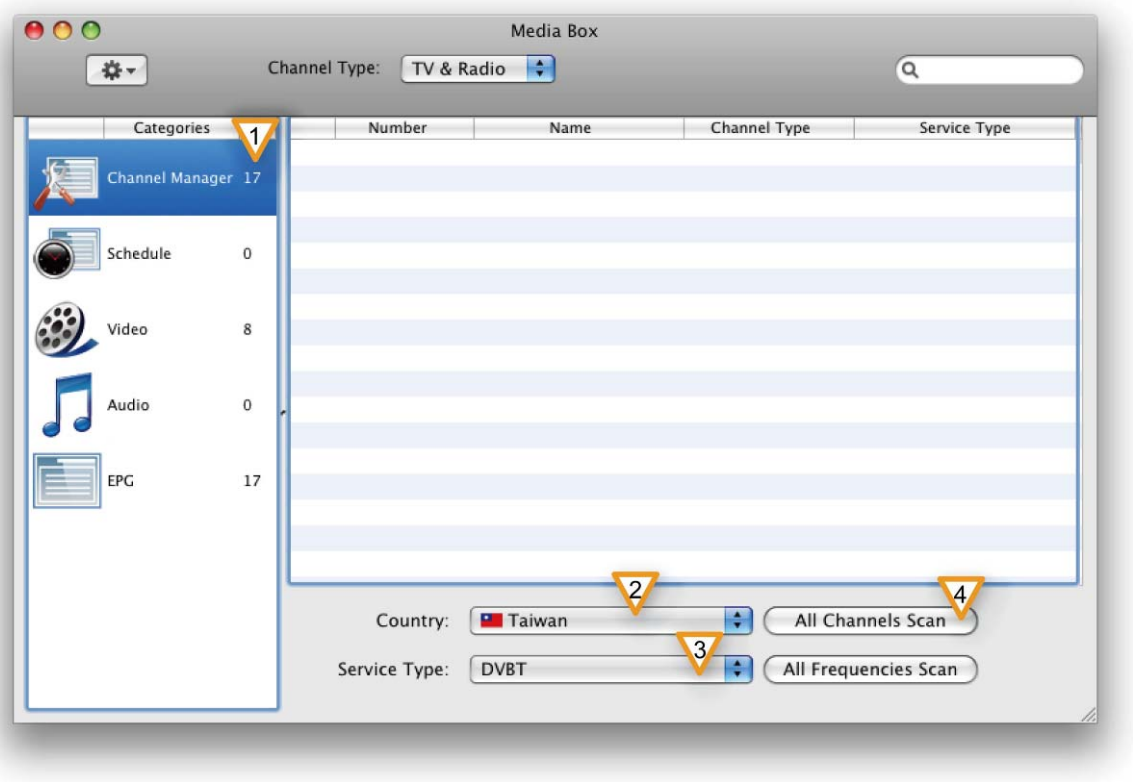

1. Go to **Channel Manager**.
2. From the **Country** drop-down menu, select your country or region.
3. Select an available **Service Type**.
4. Click **All Channels Scan** to start the searching process.

From the Channel Type drop-down menu, users can choose which channel type (TV, Radio, TV & Radio) for current scanning.

5. If you want to terminate the searching process, just click **Stop.**

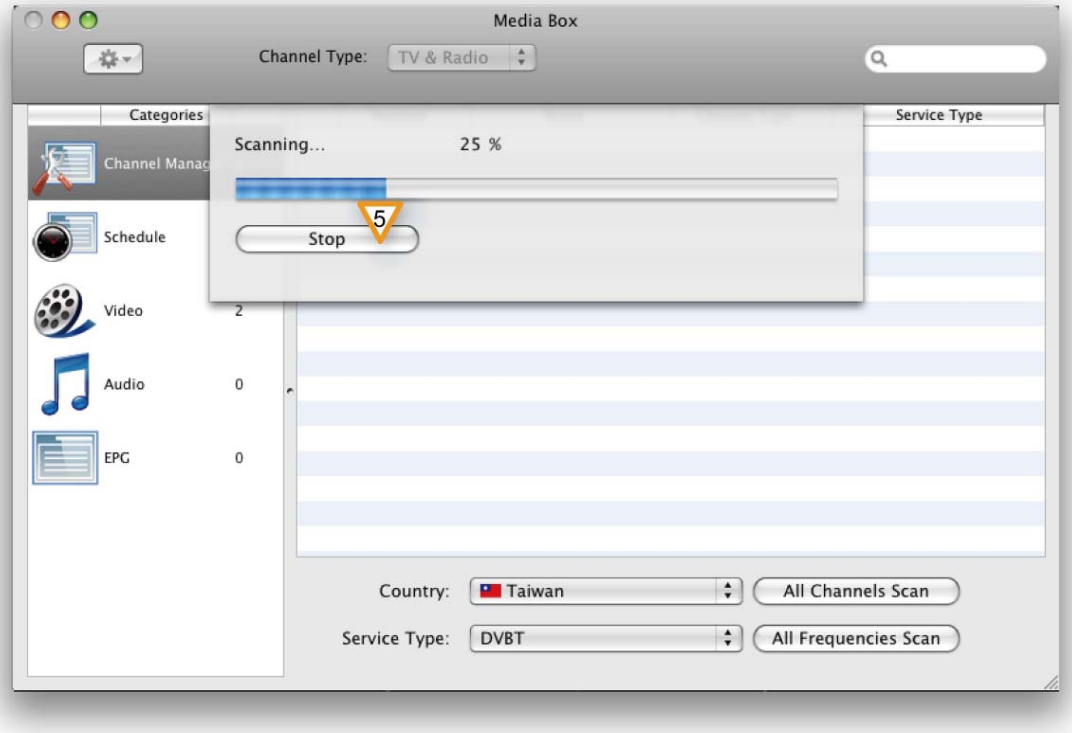

6. After scanning, new active channels/programs are memorized and listed in the right pane of the dialog box.

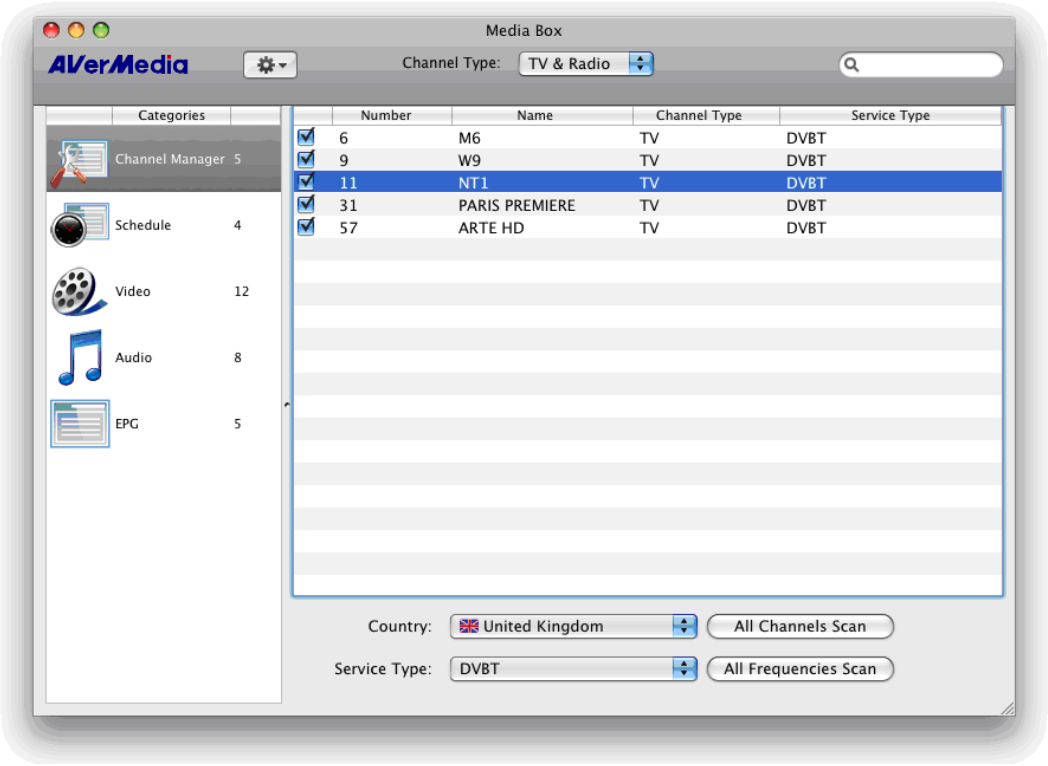

7. Close the "Media Box" window and the TV window appears.
8. If you want to skip certain channels to be previewed, just uncheck the box.

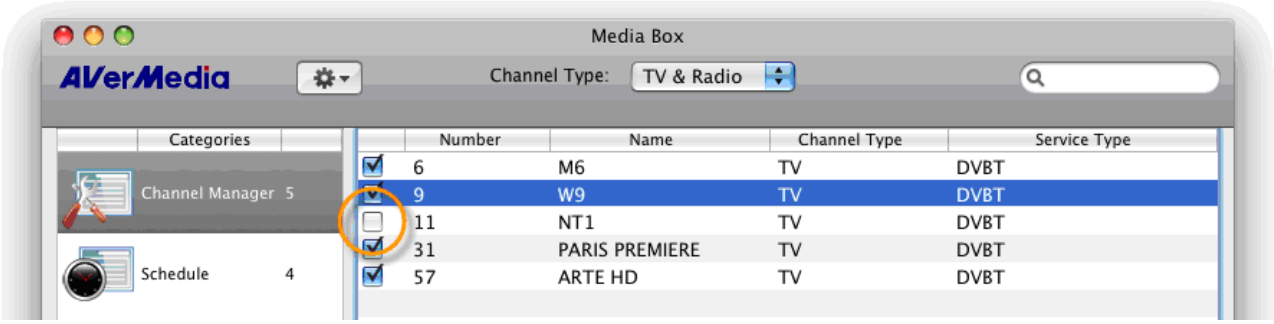

The application comes with a default frequency table; therefore, the application will use this table to search for active channels/programs.

button contains more functions:

Rename: To change the selected channel name.

Reset Channel Number: To change the selected channel number**.**

Manual Add Channel: To add a channel by entering the channel frequency**,** so as to shorten the channel scanning time.

Enable Selected Channels: To activate the channels when switching channels.

Disable Selected Channels: To skip the unwanted channels when switching channels.

Remove Selected Channels: To delete the unwanted channels.

Scanning Channels (for Advanced Users)

All Frequencies Scan

We recommend using the **All Channel Scan** function first. If there are channels missing after you perform **All Channels Scan**, use **All Frequencies Scan** function and repeat the searching process.

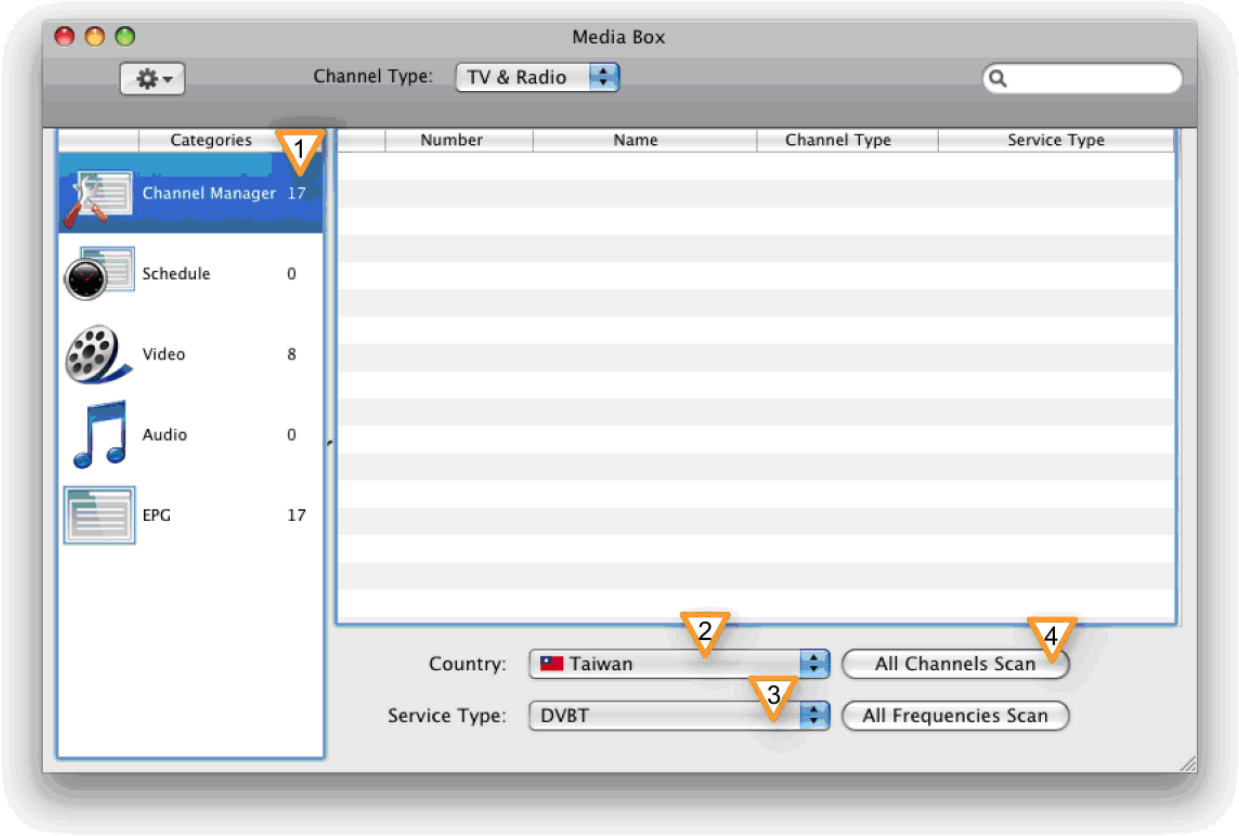

1. Go to **Channel Manager**.
2. From the **Country** drop-down menu, select your country or region.
3. Select an available **Service Type**.
4. Click **All Frequencies Scan** to start the searching process.

5. If you want to terminate the searching process, just click **Stop.**

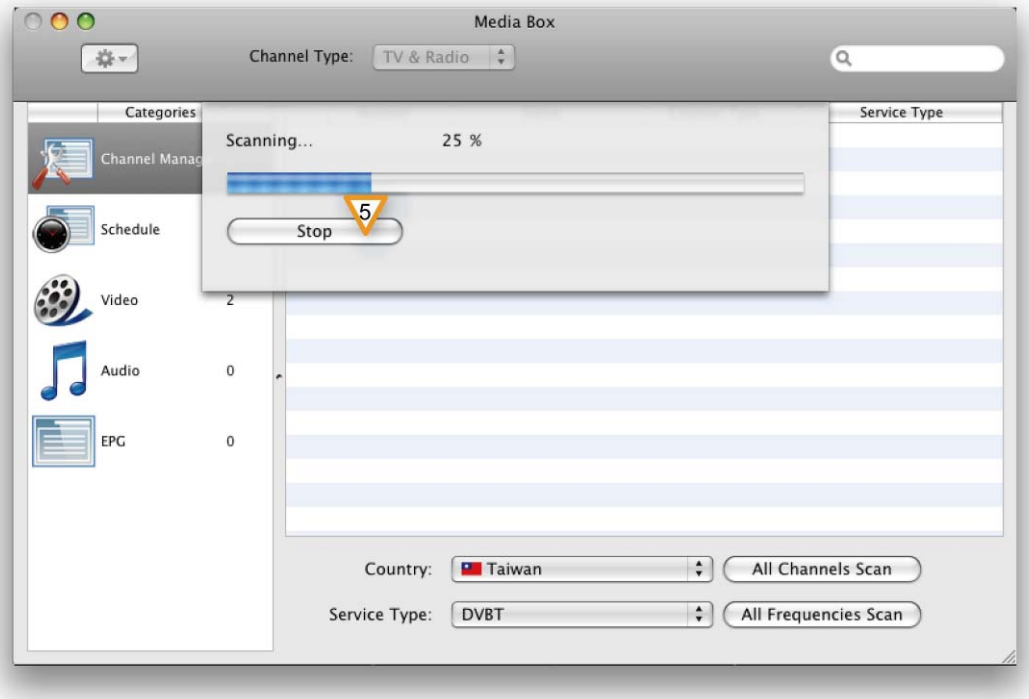

6. After scanning, new active channels/programs are memorized and listed in the left pane of the dialog box.

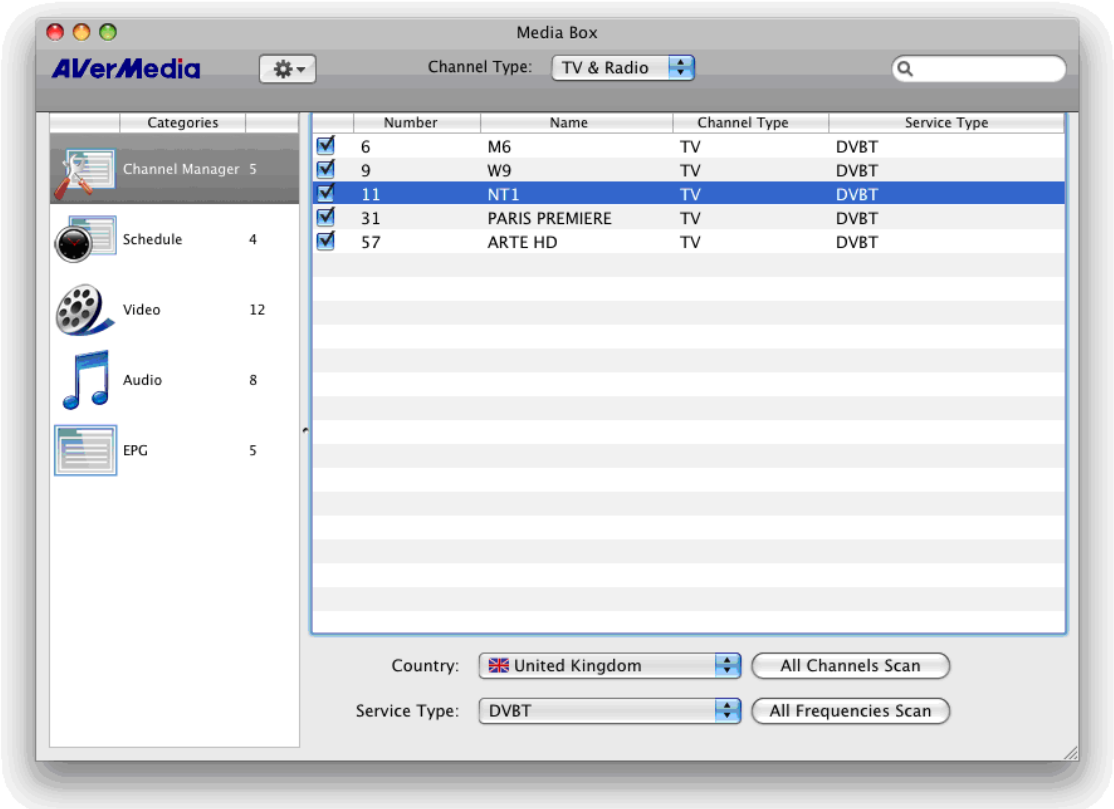

7. Close the "Media Box" window and the TV window appears.

If the below alert message pops up on the screen before scanning channels, it means a channel list has already existed. Please choose **Update Channel List** to add new channels without removing the existing ones or select **Replace Channel List** to replace the current channel list. Click **Cancel** to stop rescanning.

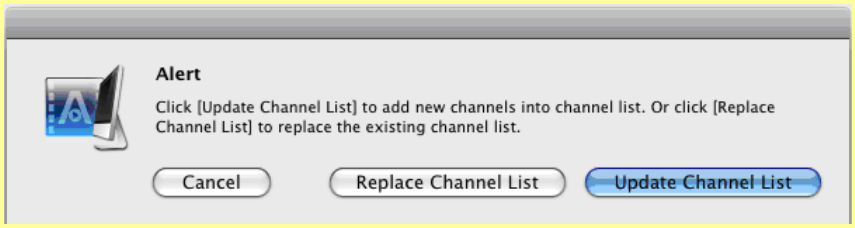
Alert
Click [Update Channel List] to add new channels into channel list. Or click [Replace Channel List] to replace the existing channel list.
Cancel
Replace Channel List
Update Channel List

Manually Add Channel

If you already know a particular channel number for your local transmitter, use **Manually Add Channel** function to add it by entering the channel numbers and shorten the channel scan.

1. Click button in the **Media Box**.
2. Select **Manually Add Channel**.

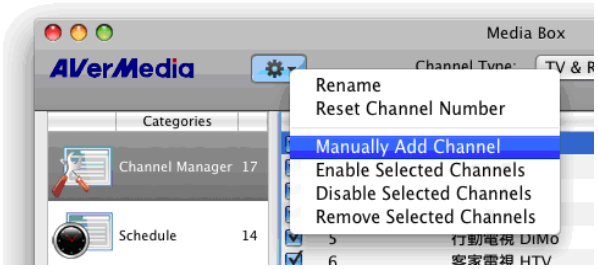

3. Enter the channel frequency that you want to start scanning. Press **Scan**.

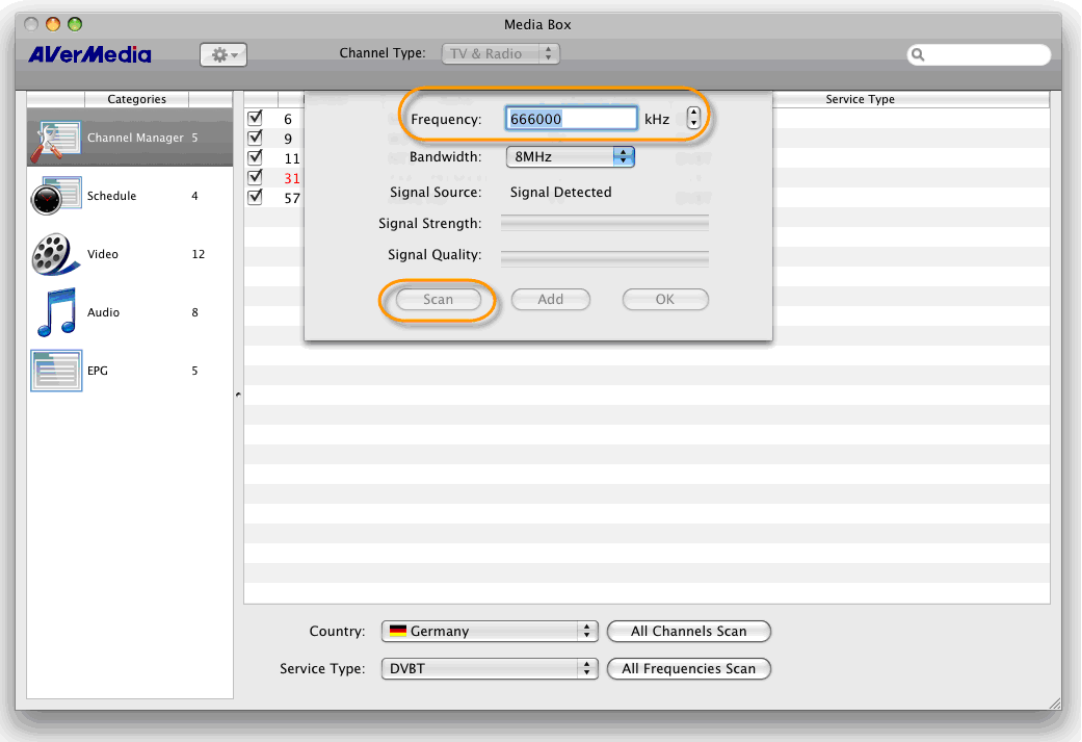

4. Click **Add** to save the scanned channel.

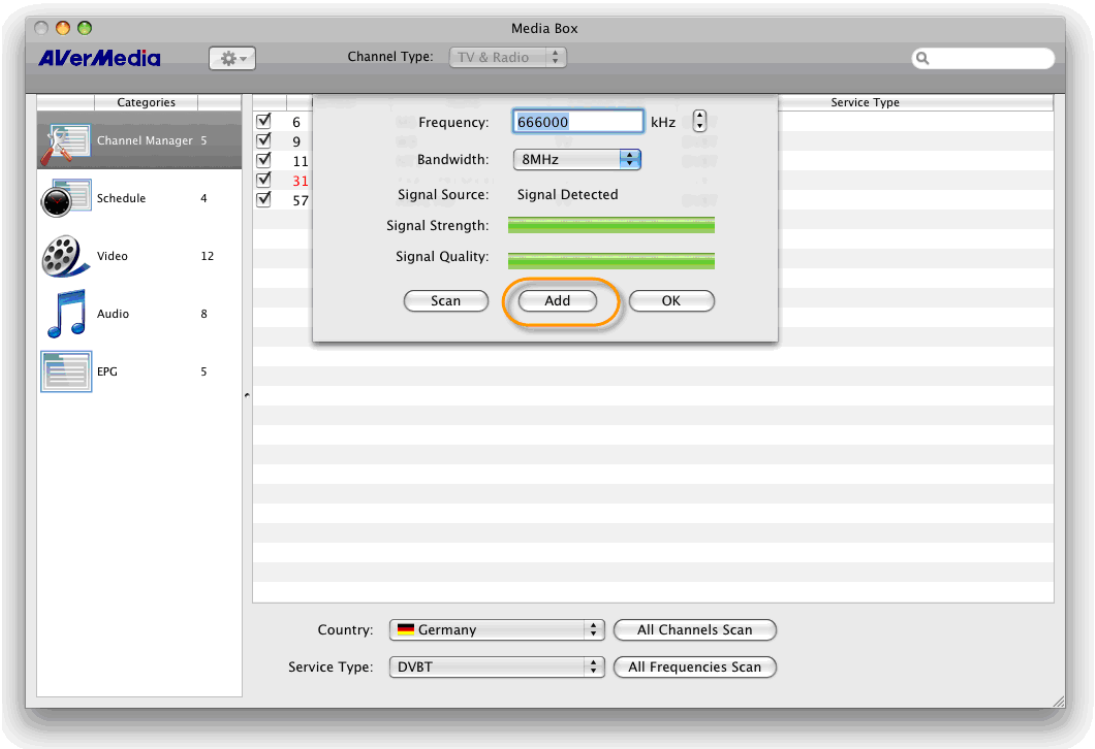

5. Click **OK** to exit the window.

Watch TV / Listen to the Radio

Switching Channels

Operate by Control Panel

Use **Channel Down** and **Channel Up** buttons to go to the next lower or upper active channel.

Using Menu Bar Controls

Point to **Control** and select an action.

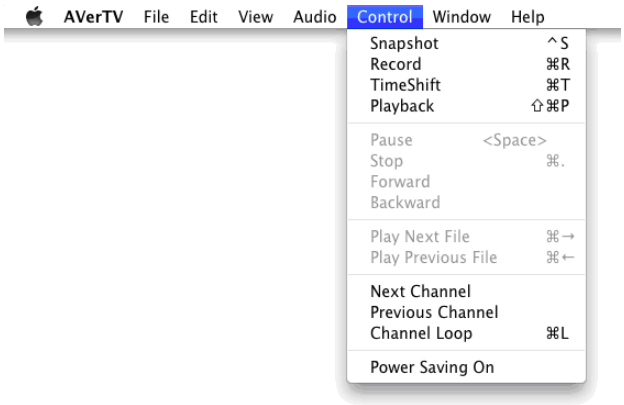

- **Previous Channel**

Go to the next lower active channel.

- **Next Channel**

Go to the next upper active channel.

- **Channel Loop**

Return to previously accessed channel.

Selecting a Channel from the Channel List

From On-Screen Menu

Operate by Mouse or Apple Remote

1. Open the On-Screen Menu.
2. Select **Channel** to view the channel list.
3. Choose the desired channel.

Operate by Keyboard

You may use the numeric keypad to switch channels.

1. After you type a number, the On-Screen Menu is opened and you can see the correlated channel is highlighted.
2. Press **Enter** to confirm your selection.

From Channel Manager

1. Open the "Media Box" window and choose **Channel Manager** in the left pane to see the channel list.
2. Double-click on the channel you want.

Multi-Channel Preview

The Multi-Channel Preview function can display 4, 9 or 16 consecutive TV channels on-screen at the same time. You can see clearly which TV programs are currently showing on these channels.

Activate Multi-Channel Preview

Using Menu Bar Controls

To start the Multi-Channel Preview function, point to **View>Open Channels Preview**.

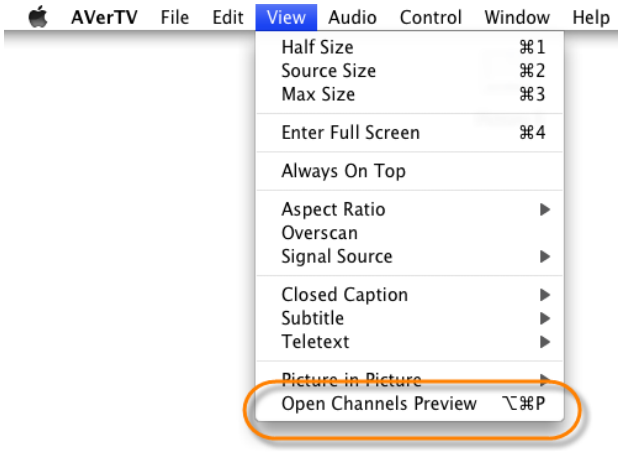

Watch TV in the Multi-Channel Preview Mode

Operate by Mouse

When you are in Multi-Channel Preview mode, select a channel by clicking your mouse to view it only and freeze the other channels.

If you select and double-click on any one of the channels on-screen, you will then be tuned into that channel displayed on the TV Monitor window and exit from the Multi-Channel Preview mode.

Operate by Keyboard

To operate the Multi-Channel Preview function with keyboard, use **arrow keys** to move the selection, and **Enter key** to start previewing the selected channel. To exit from the Multi-Channel Preview mode, press **Esc key**.

Multi-Channel Preview Setup

1. Choose **Preferences** from the AVerTV application's menu.
2. Click the **General**

icon
3. Select how many channels you want to be previewed at a time.

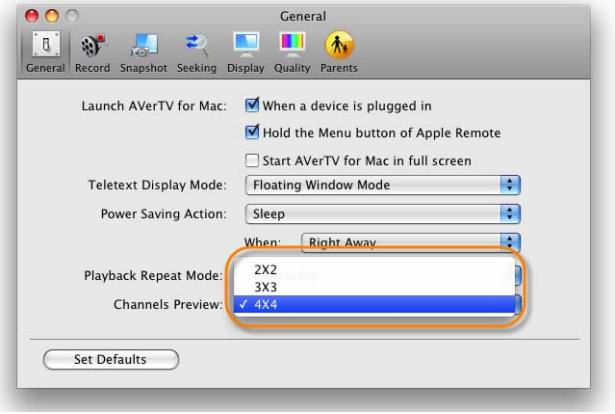

4 channels preview

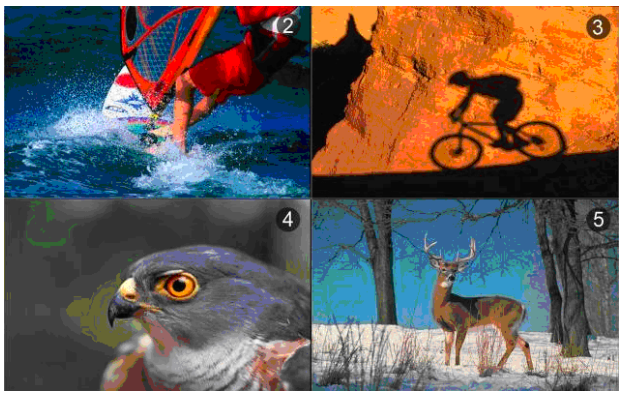

9 channels preview

16 channels preview

TimeShift

The TimeShift function performs background recording of a TV/Radio program, and lets you return and enjoy any part of the recorded program. At the same time, the live TV/Radio program continues to be recorded and played back so you won't miss any part of the show. You can also advance forward to skip commercials or rewind to replay scenes.

TimeShift Controls

Operate by Control Panel

1. Use button to start TimeShift.
2. Click button to temporarily freeze the playback.
3. Click button to terminate TimeShift recording and return to the live program.

Using Menu Bar Controls

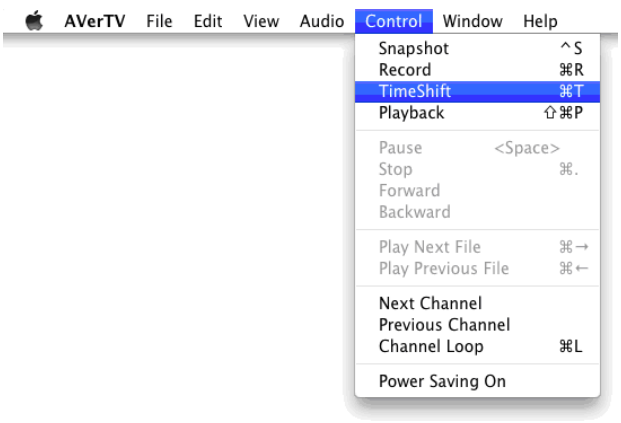

TimeShift

To start TimeShift function.

Pause

To temporarily freeze the playback.

Stop

To terminate the TimeShift recording and return to the live program.

TimeShift Settings

Before you start using the TimeShift function, first check its recording settings and see if they fit your needs.

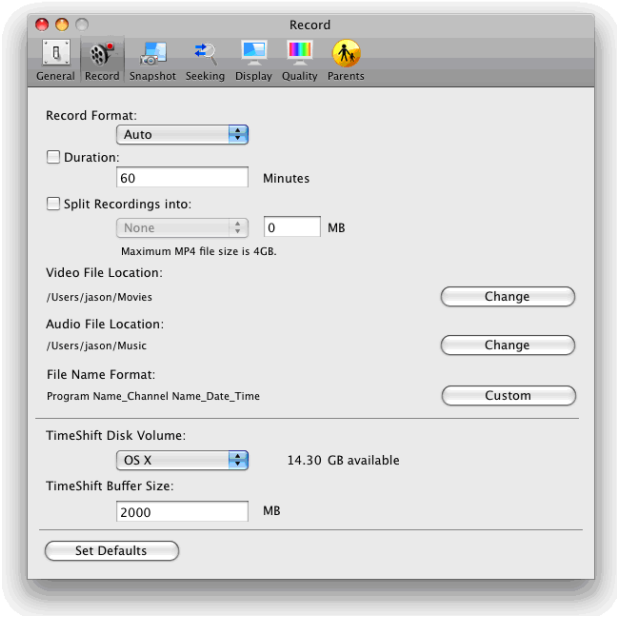

1. In the **Preferences** pane, click on the **Record**

icon.
2. By default, TimeShift performs recording of the TV program by creating a temporary video file. To delete this file, click the **Stop** button.
3. In the **TimeShift Disk Volume** section, you can determine desired disk volume to save the TimeShift file.

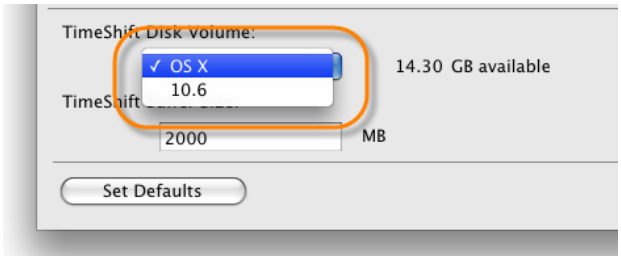

4. In the **TimeShift Buffer Size** section, you can determine the buffer size. The default value is 2000MB, and the minimum size is 200MB.

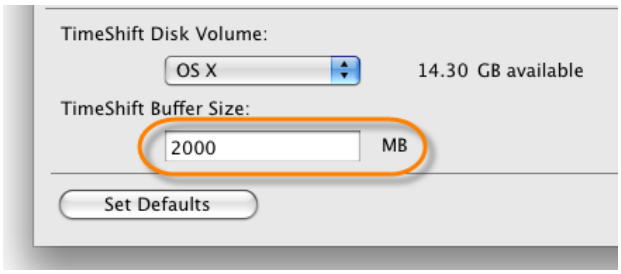

Using the EPG Function

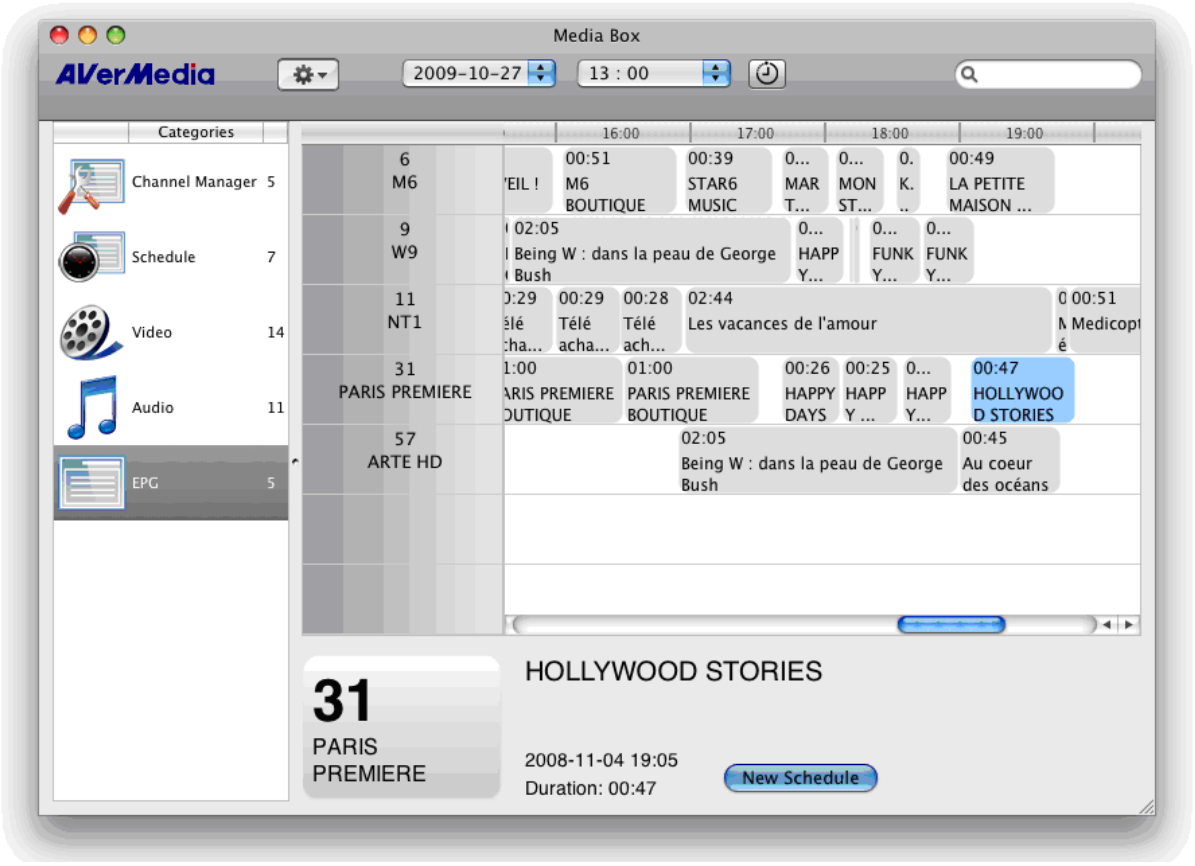

Electronic Program Guide (EPG) is a service that allows you to check the succeeding program schedule and even the program schedules of the whole week.

If the EPG service is provided in your region/country, point to menu **File>Open EPG** to open the **EPG** window.

You can also open the **Media Box** and click on the **EPG** icon.

Another way is open the On-Screen Menu and enter the **EPG** submenu.

Select the desired date and time from the drop-down menu and the *EPG* window will display the schedule for the chosen date.

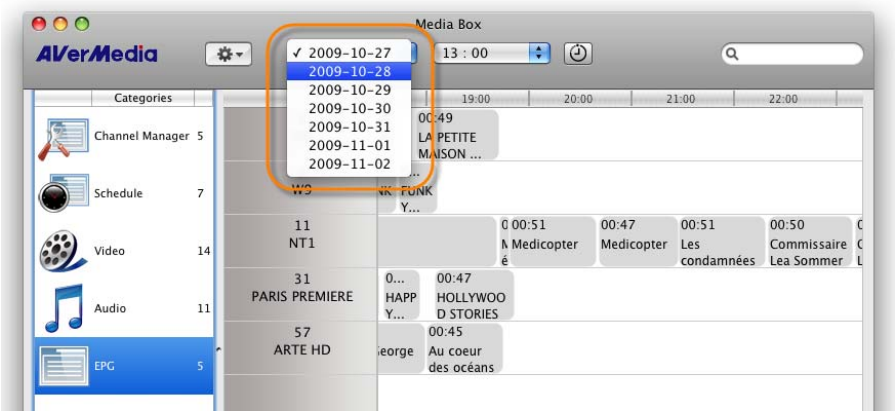

Preset a Schedule from EPG

Our *EPG* window also allows you to preset a schedule for watching or recording programs. Just select your favorite program, click **New Schedule** button and complete the setting, the system will execute your command on schedule.

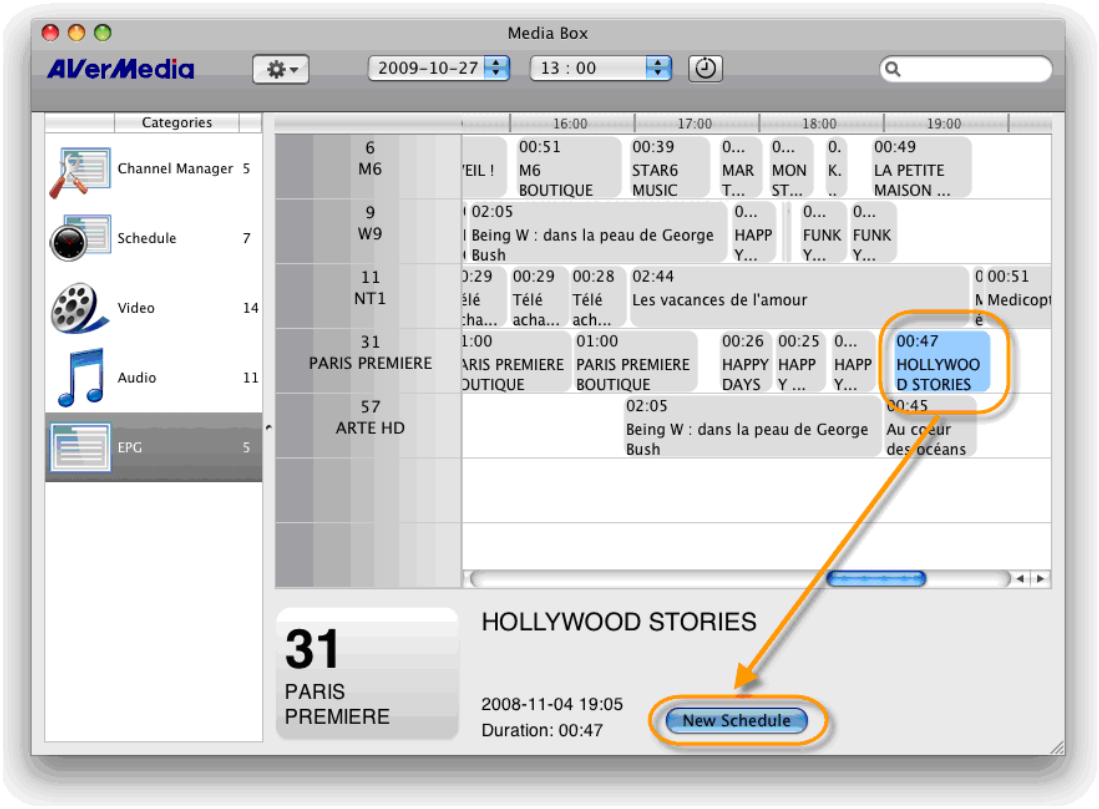

The program time data will be automatically set. Enter the schedule name in **Title** and select an action from **Function** and **After Scheduled Recording** options. Click **OK**.

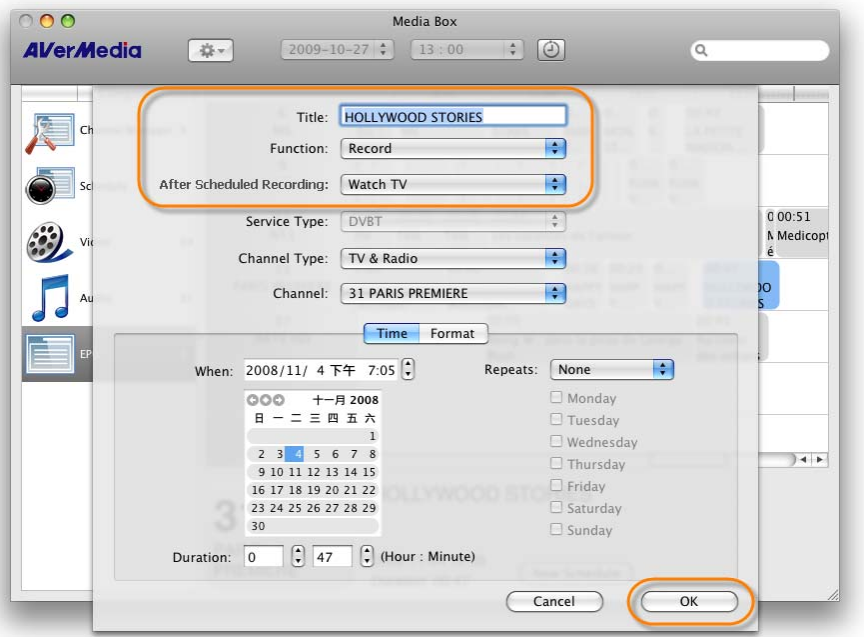

Other EPG Features

Update EPG

If you want to download the latest program schedule, click the button and select **Update EPG**.

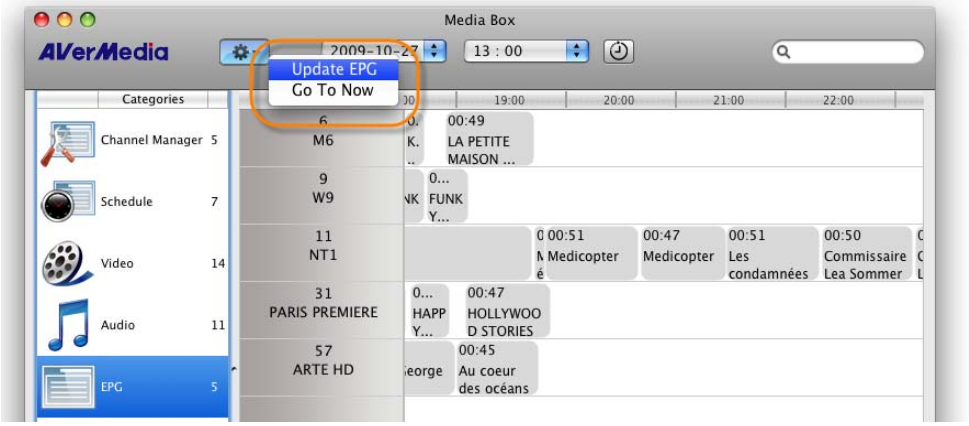

Go To Now

If you want to view the current-time schedule, click on the **Go To Now** icon, or click button and select **Go To Now.** Then you can jump to the page of current-time schedule.

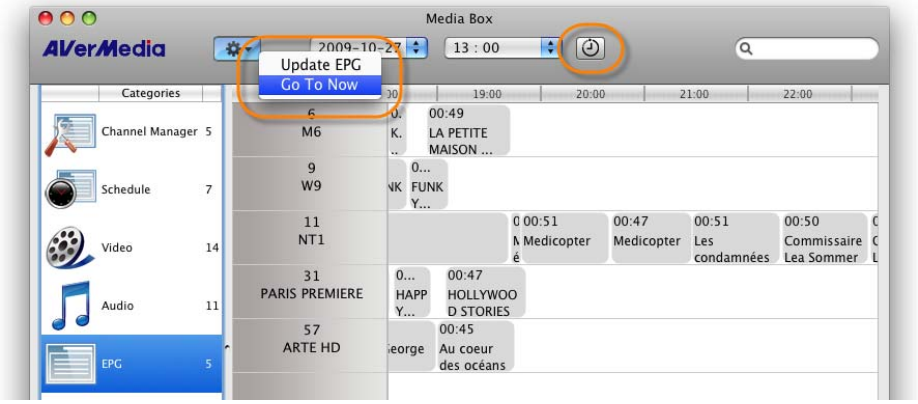

Keyword Search

You can also use keyword **Search** function to quickly find the programs you want.

Media Box
AVerMedia
2008-11-04
18 : 00
the
Categories
Channel Manager 5
Schedule 8
Video 14
Audio 12
EPG 5
Title
Duration
When
Channel
The Sex Inspectors 00:39 2008-11-09 06:32 11 NT1
How I met your mother 00:24 2008-11-08 22:30 11 NT1
How I met your mother 00:28 2008-11-08 22:02 11 NT1
Série rose 00:32 2008-11-07 07:48 11 NT1
How I met your mother 00:25 2008-11-06 00:00 11 NT1
How I met your mother 00:31 2008-11-05 23:28 11 NT1
The shield 00:44 2008-11-05 06:04 11 NT1
The shield 00:55 2008-11-05 05:09 11 NT1

Fine Tuning Color of the Display

If the color or picture quality of the TV displays needs to be adjusted, please do the followings:

1. Click **Quality**

icon in the **Preferences** pane.

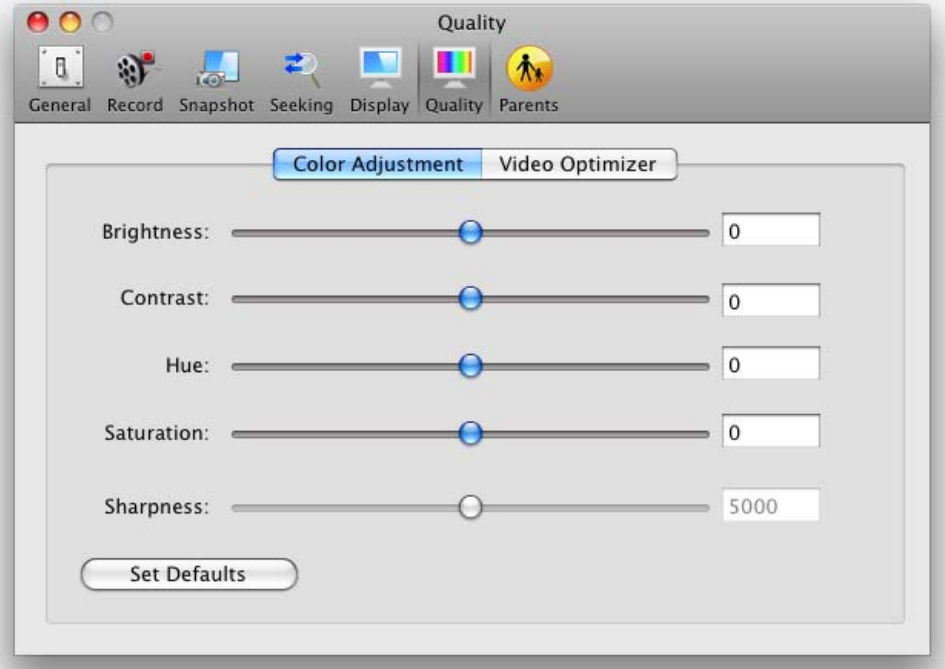

2. Then you can adjust the **Brightness**, **Contrast, Hue, Saturation** and **Sharpness** with sliders until you get an accurate color.
3. If you want to revert to default settings, just click **Set Defaults** button.

Video Optimizer

You can use Video Optimizer function to make your video clearer and sharper, and at the same time enhance the video color. It's also easier for you to adjust the effect with side-by-side Vertical Split View or Compare View.

1. Click the **Quality**

icon in the **Preferences** pane.
2. Select an option to adjust the video. Select **Disable** to disable the Video Optimizer function and **Normal View** to see the effect of Video Optimizer. Choose **Vertical Split View** or **Compare View** to split the video image vertically into two screens. Left screen

displays the effect of the Video Optimizer function.

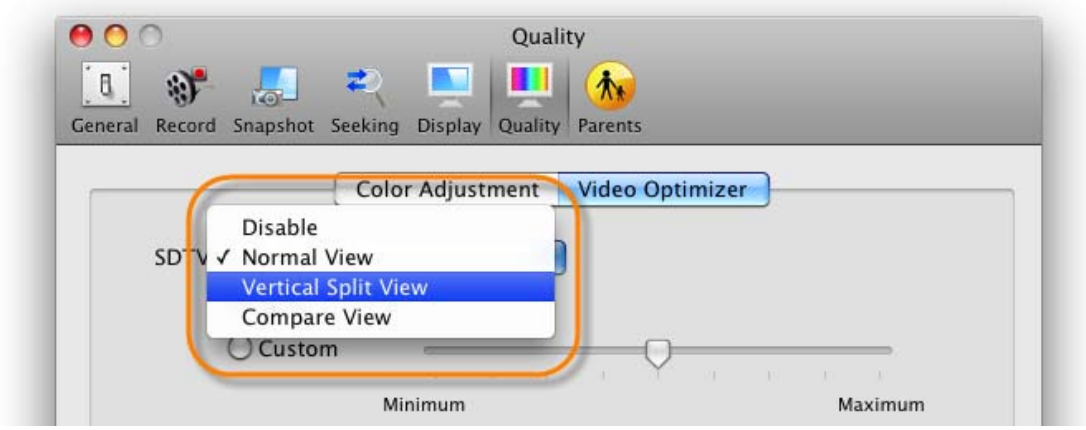

Vertical Split View

Compare View

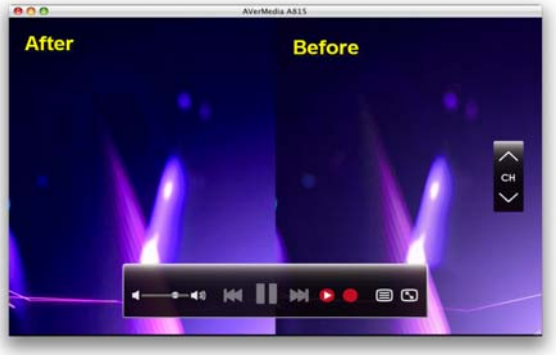

3. Choose **Auto** to automatically set the suitable value, or choose **Custom** to adjust the value as you prefer.

The SDTV setting will be applied when you turn to SDTV channels, and the HDTV setting will be applied when you switch to HDTV channels.

Using the Overscan function

On some broadcast channels, you might see distorted lines or black spaces on the top, sides, or bottom of the screen. These video artifacts device from the source signal, and can be masked using the **Overscan** feature.

To hide the edges of the picture:

1. Click the **Display**

icon in the **Preferences** pane.
2. Specify an appropriate number (1~20%).
3. Select **Turn On** to enable the Overscan function or **Turn Off** to disable it.

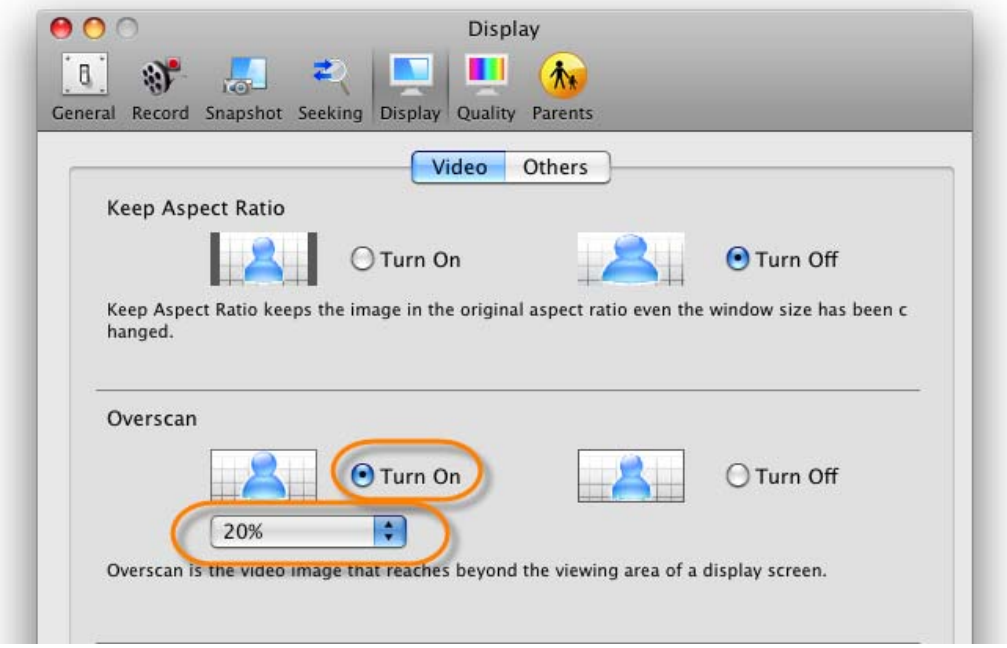

Another way to enable and disable the Overscan function is to point to menu bar **View>Overscan**.

You can see the difference from the pictures below:

Before using Overscan function

After using Overscan function

Adjusting Volume

On the Control Panel, click and drag your mouse over the **Volume** meter

on the control panel to increase or decrease the volume.

Point to menu **Audio>Volume Up** to increase the volume. Point to menu **Audio >Volume Down** to decrease the volume. Point to menu **Audio>Mute** to turn off/on the sound.

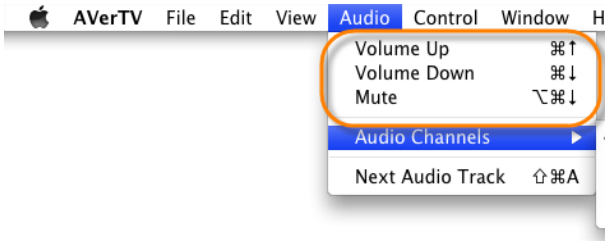

Changing Audio Channels

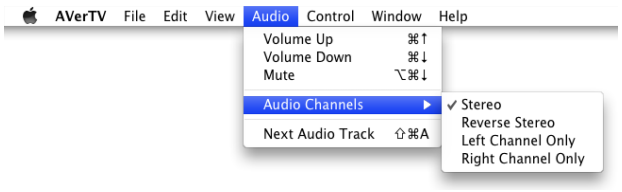

Select **Stereo**, **Reverse Stereo, Left Channel Only** or **Right Channel Only** in the **Audio Channels** to change the audio output type. Click **Next Audio Track** to switch between available audio tracks or select the desired audio track directly.

Change Signal Source

1. Point to the menu **View>Signal Source.**

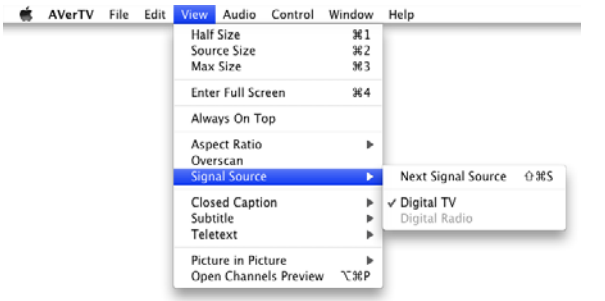

2. Click **Next Signal Source** to switch between available signal sources. Or select the desired source directly.

Changing the OSD Attributes

To change the on-screen display in the TV window, do the followings:

1. In the **Preferences** pane, click on the **Display**

icon.
2. Click **Others button**.

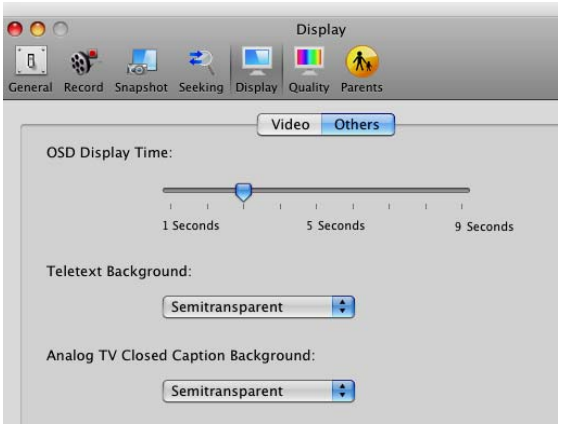

3. Choose a desired OSD display time by dragging the **OSD Display Time** slider bar.

4. To set Teletext and Closed Caption background color as Transparent, Semitransparent or Opaque, select from the drop-down menu in **Teletext Background** and **Closed Caption Background** sections.

Changing Display Aspect Ratio

Aspect ratio indicates the ratio of the width of an image to its height. To change the display aspect ratio, do the followings:

1. Click on the **Display**

icon in the **Preferences** pane.
2. Click **Video** button.

3. In the **Keep Aspect Ratio** section, choose **Turn Off** to extend the video image or select **Turn On** to preserve the original width and height of an image.

OR,

1. Point to menu **View>Aspect Ratio**.

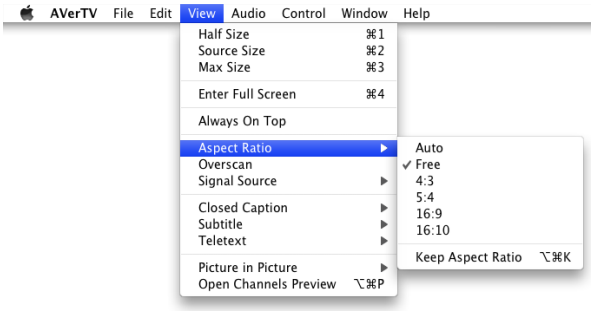

2. Select the aspect ratio.

4:3 and **16:9** are the two most common aspect ratios in home video. You can choose **Free** to adjust the aspect ratio as you want. Or select **Keep Aspect Ratio** to preserve the original width and height of an image.

You can see the difference from the pictures below:

- **Normal**

- **Keep Aspect Ratio**

TV Window Controls

You can minimize the AVerTV for Mac window to the Dock and reveal it again, hide all other application windows expect AVerTV for Mac, or close AVerTV for Mac application from the **AVerTV** menu.

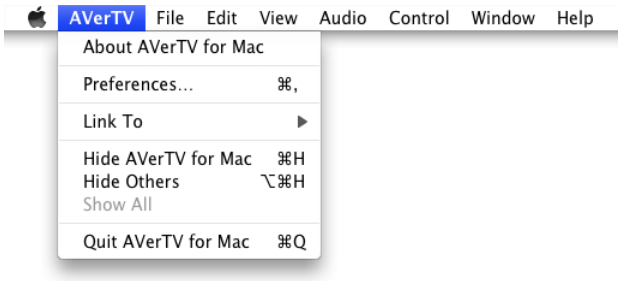

- **Hide AVerTV for Mac**

Minimize the AVerTV for Mac windows to the dock.

- **Hide Others**

Hide all windows except AVerTV for Mac.

- **Show All**

Show all hidden windows.

- **Quit AVerTV for Mac**

Close the AVerTV for Mac application.

Other Layout Controls in Window Menu

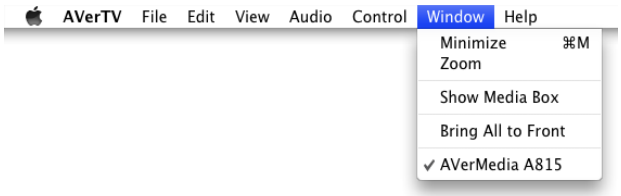

- **Minimize**

Minimize the AVerTV windows to the Mac dock.

- **Zoom**

Change the AVerTV window size.

- **Show Media Box**

Open/Close the Media Box.

- **Bring All to Front**

Bring all AVerTV windows to the front.

Always On Top

To make the TV monitor window float over the top of other program windows, point to menu **View>Always On Top**.

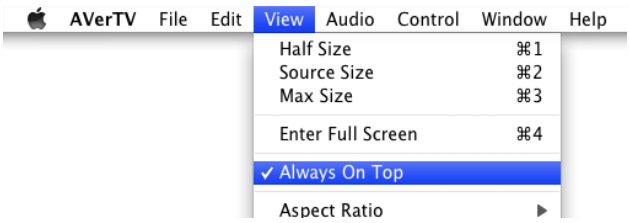

Window Size Settings

There are 4 window size options: **Half Size, Source Size, Max Size** and **Full Screen**. Point to the menu **View** and then select a size you want.

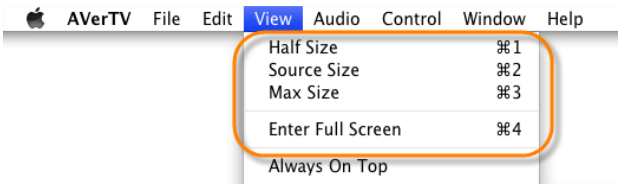

Half Size

Max Size

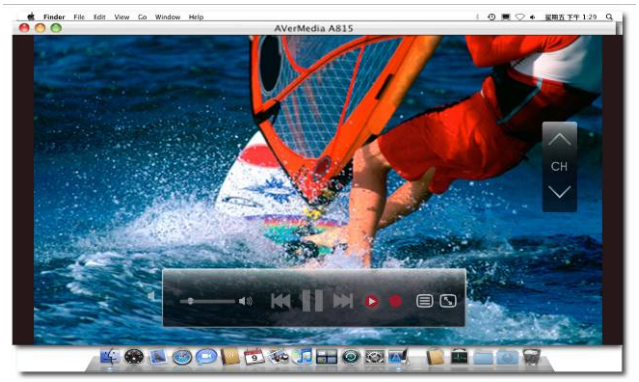

Source Size

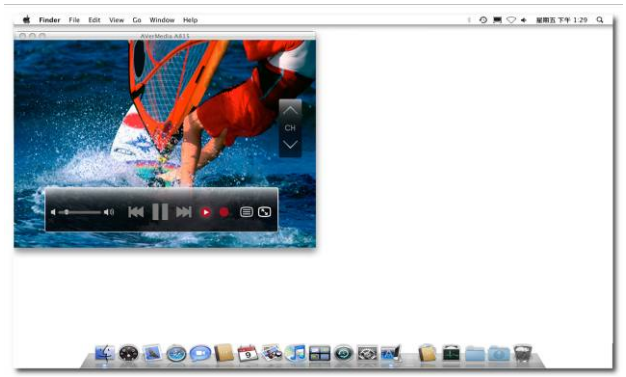

Full Screen

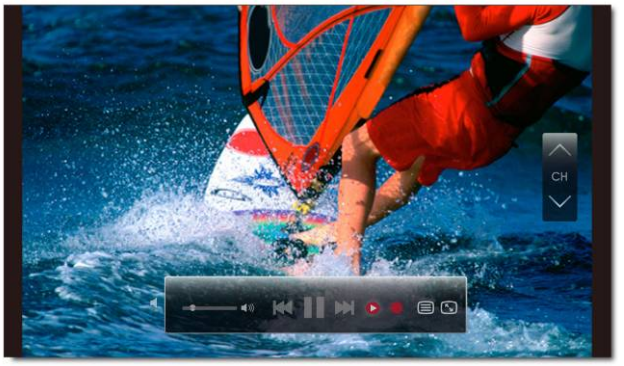

Personal Video Recorder

You can use your Mac as a personal video recorder, and record your favorite TV programs or capture video from an external source into your hard drive. Besides, you can also divide the recording files in proper sizes to facilitate burning onto removable optical media, such as CD-R and DVD disks. Before recording, check if the settings of **Storage Setting** and **Recording Format settings** meet your needs.

Record Storage Settings

1. In the **Preferences** pane, click on the **Record**

icon.

2. The **Duration** option allows you to specify a recording duration; otherwise, the system will record the largest clip that your hard drive can accommodate.
3. This application allows you to divide the recording files in parts for burning onto removable optical media, such as VCD (650 MB), DVD (4096 MB) and DVD-DL (8192 MB) discs. Enable the **Split Recordings into** option and, from the drop-down menu, select the appropriate video file size so that each video file does not exceed the limit you set. Or you can choose **Custom** to assign the file size you want.

4. Determine the **Video File Location** destination folder. Click **Change** to choose a folder you want.
5. The system sets the recording "Product Name," "Channel Name," "Date" and "Time" as the default file name format.

Click the **Custom** button in the **File Name Format** section to customize the file name. You can preview the file name format from the **Preview** section.

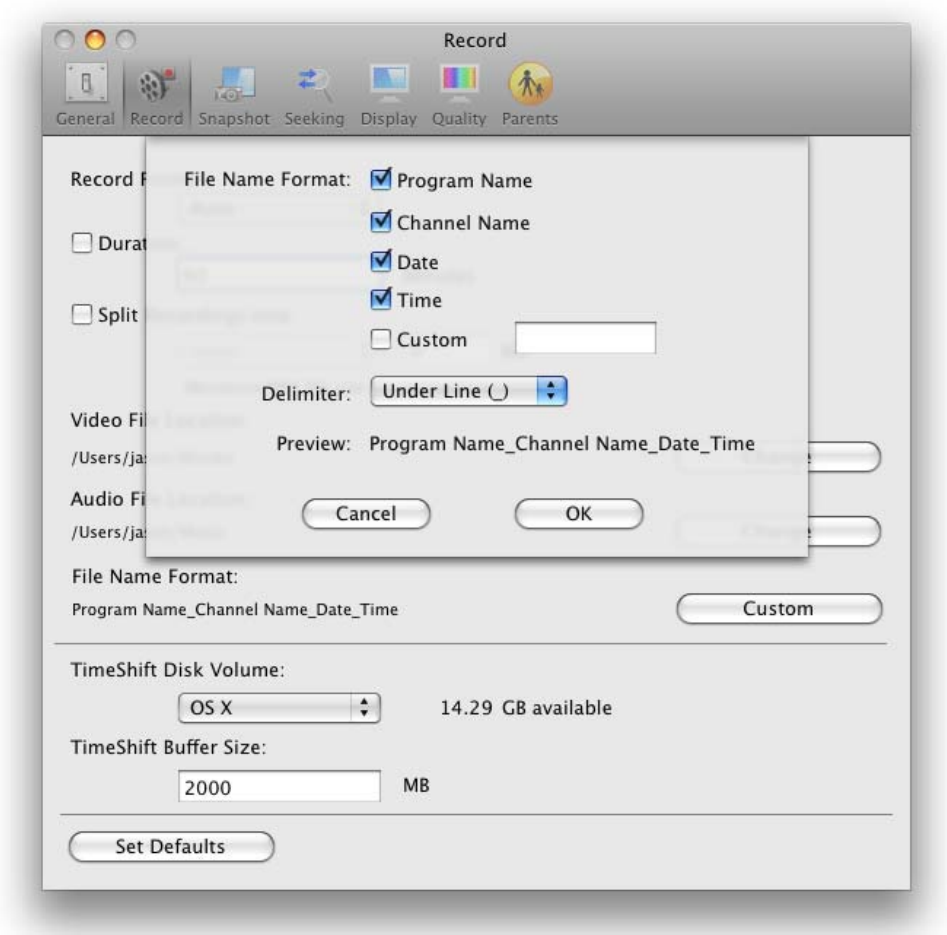

Recording Format Settings

1. To set the recording format, click the **Record**

icon in the **Preferences** pane.
2. From the **Record Format** drop-down menu, determine the video file format you wish to use for saving the recorded video file.

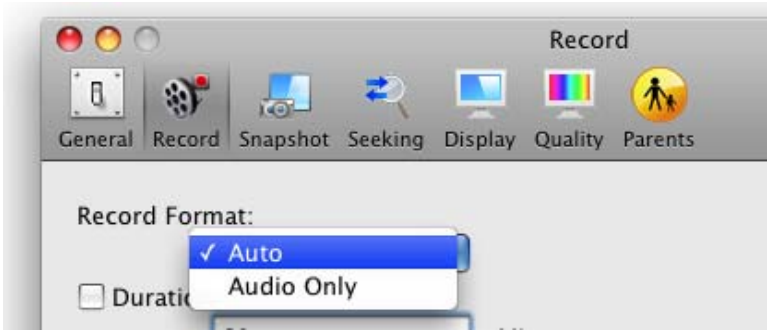

File Format	Description
Auto	Record the current program into your hard drive.
Audio Only	Record the audio part only of the current program into your hard drive.

Using the Recording Function

To record a TV/Radio program that you want, do the followings:

Operate by Control Panel

1. On the Control Panel, click on the **Record** button .
2. You can click the **Stop** button to terminate the recording and return to the live TV program.

OR

Using Menu Bar Controls

1. Point to menu **Control>Record** to start recording.
2. Point to menu **Control>Stop** to terminate recording.

Schedule Recording

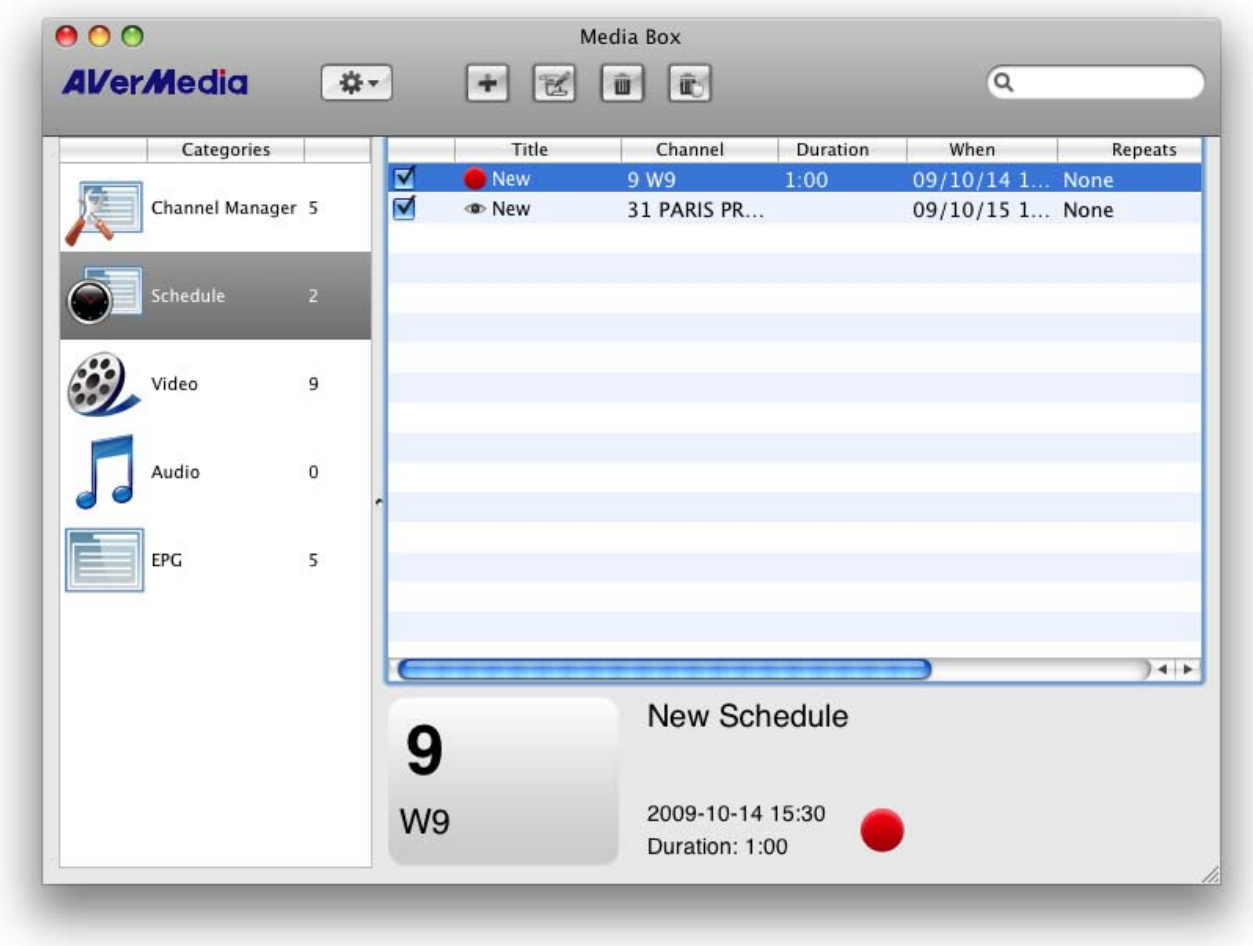

The **Schedule** allows you to create a list of preset schedules for watching and recording your favorite TV/Radio programs. You can set the date and time to record the TV/Radio program as well as specify the length of the recording.

1. In the **Media Box**, click on the add **New Schedule** button.

OR,

1. Point to the menu **File>New Schedule**.

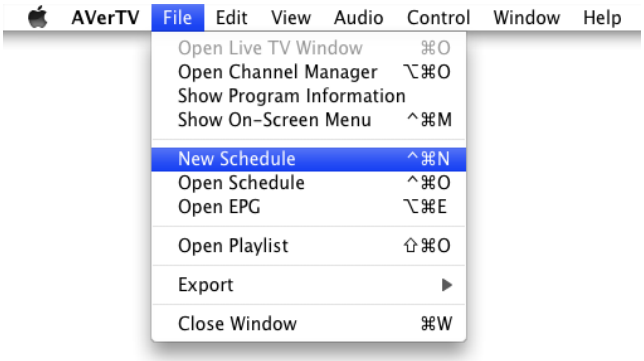

2. The following dialog box then appears.

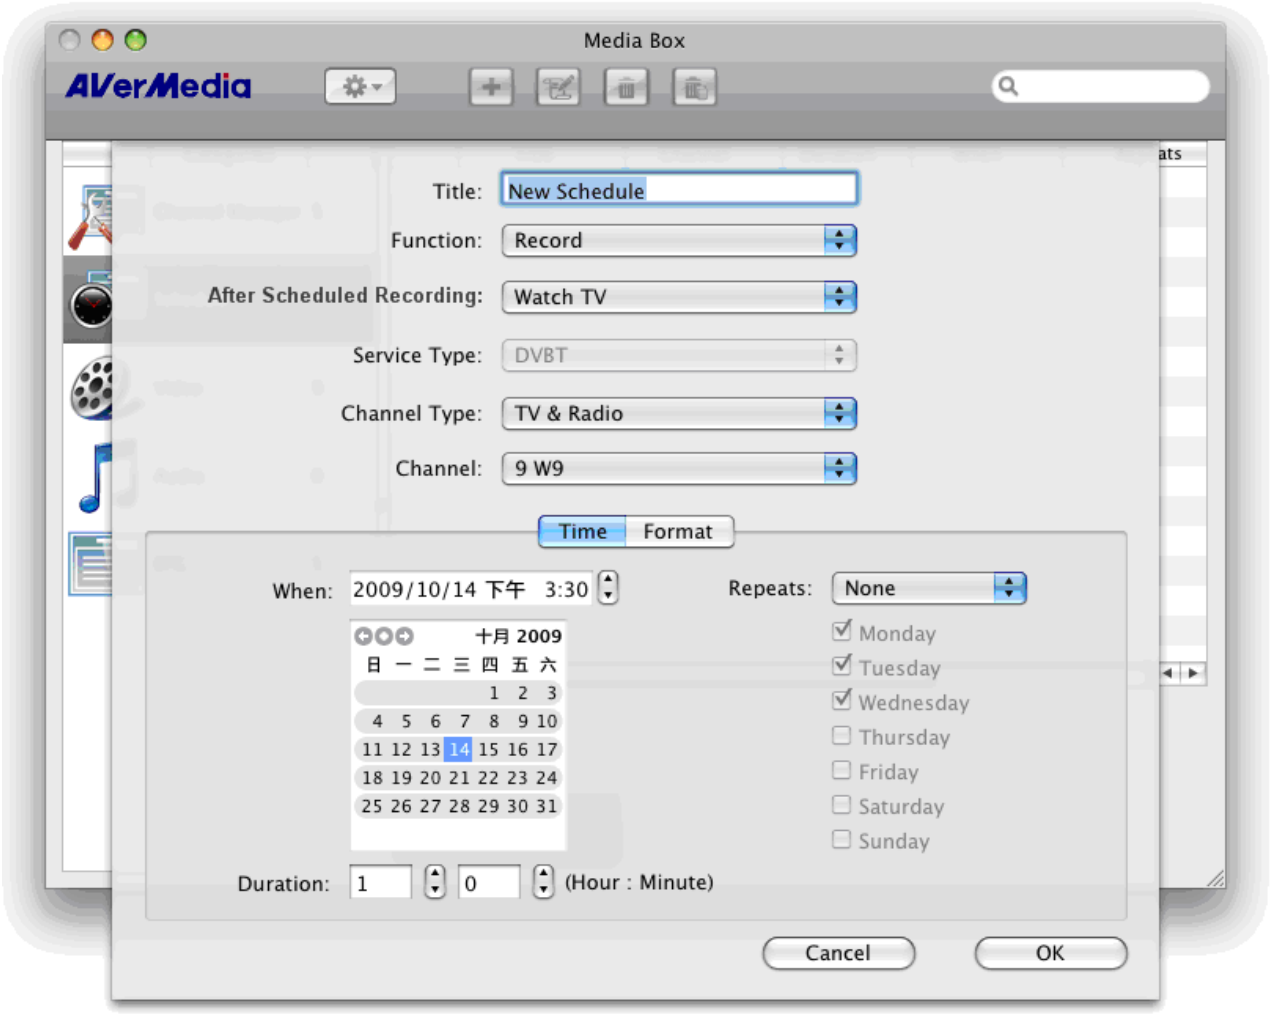

3. In the **Title** text box, type in the desired name.
4. From the **Function** drop-down menu:
   - Select **Watch TV** to watch a TV program or listen to a radio broadcast.
   - Otherwise, select **Record** to save a TV/Radio program for future viewing/listening.
5. In the **After Scheduled Recording** drop-down menu, choose one of the following power control modes after scheduled recording. The chosen event triggers automatically when the scheduled recording is completed.
   - **Watch TV:** Switch to real-time TV mode.
   - **Exit:** Turn off the AVerTV for Mac Application.
   - **Sleep:** Turn off your monitor and hard disks or save everything and then turn off your computer according to your system setting.
   - **Shut Down:** Turn off your computer.
6. Click the **Channel** list, select the channel you want to watch or record.

7. Set the schedule to tune in live TV or to perform recording. You can set the schedule repeat frequency to **None**, **Daily**, **Weekly, Weekend** or **Custom**.
   - Choose **None** to perform schedule at a preset day and a preset time.
   - Choose **Daily** to perform schedule everyday at a preset time.
   - Choose **Weekly** to perform schedule every week, at a preset day and time.
   - Choose **Weekend** to perform schedule every weekend, at a preset day and time.
   - Choose **Custom** to select the days you want, at a preset day and time.
8. If you choose **Watch TV** in step 4, click **OK** to complete the settings. If you choose **Record**, please do the following.
9. In the **Format** section, you can determine the Record format or split file size.
10. Click **OK** to save the new schedule or click **Cancel** to abort the saving.

If you want to delete a selected schedule, click to delete it, or click to make changes.

If a schedule is conflicted with the existing schedule, an alert message will pop up on the screen. You need to choose which one to be kept and click **Keep**. Choose **Cancel** to abort the action.

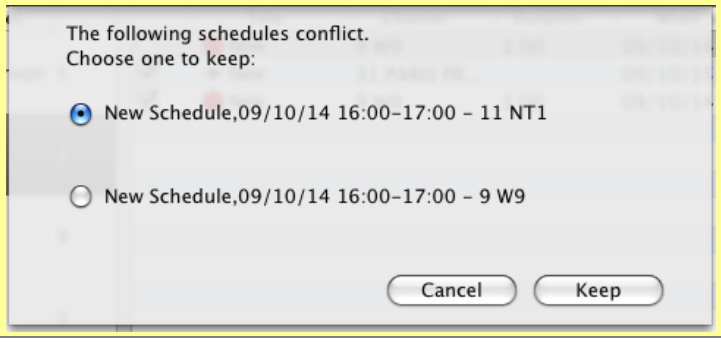

button contains more functions:

Rename: To change the name of the selected schedule.

When schedule record is activated when the AVerTV for Mac is closed, silent record will be enabled automatically.

Playing the Recorded Programs

Each TV/Radio program that you recorded will be saved in the assigned destination folder. You can find the file list in **PlayList**.

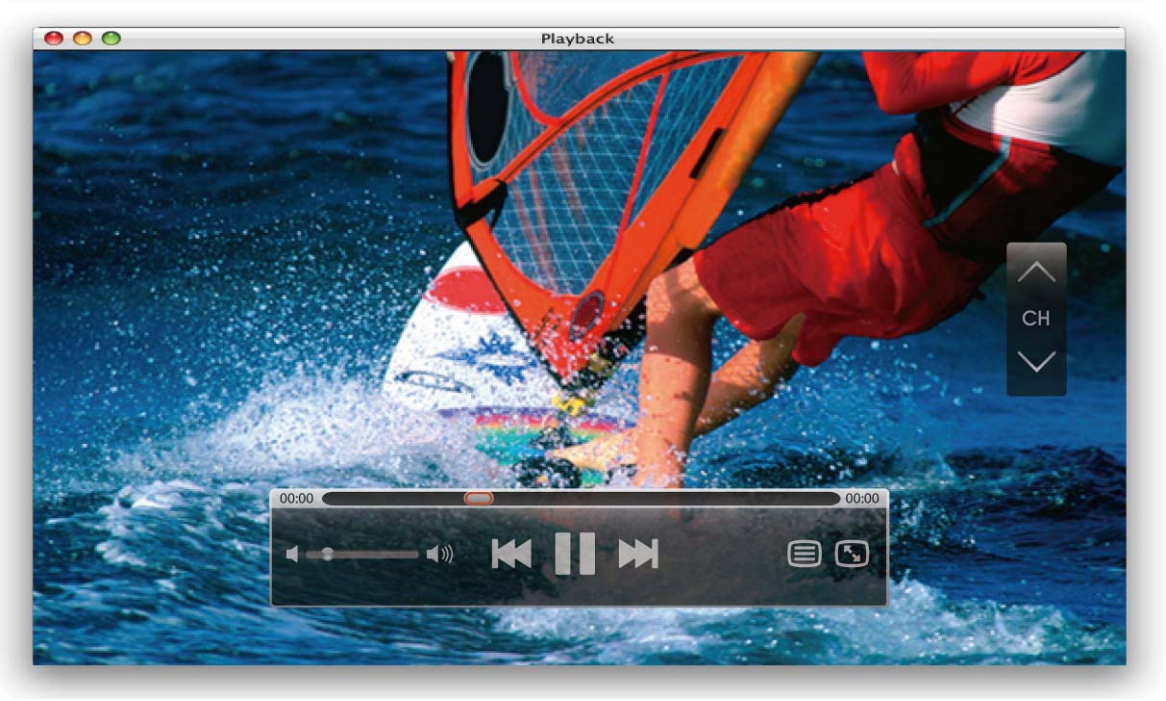

To play back the recorded files:

Operate by Control Panel

1. Right click on the screen and choose **Playback**.
2. Shortly click on ⏮ and ⏭ buttons on the Control Panel to playback the previous and next file in the playlist.
3. Use ⏸ and ▶ buttons to pause and keep playing the file. Use ⏹ button to stop playing.
4. When you want to rewind or forward, use the **Playback Seek** slider bar to move back or forward. Or press and hold, for at least 2 seconds, ⏮ button to rewind and ⏭ button to forward on the Control Panel (Fast-Forward and Rewind speeds are increased to x2, x4 and x8 after 2, 7 and 10 seconds).
5. Click the **Close button** on the top left corner to stop playback and close the Playback window at the same time.

OR,

Using Menu Bar Controls

1. Use the options in **Control** menu to operate the playback.

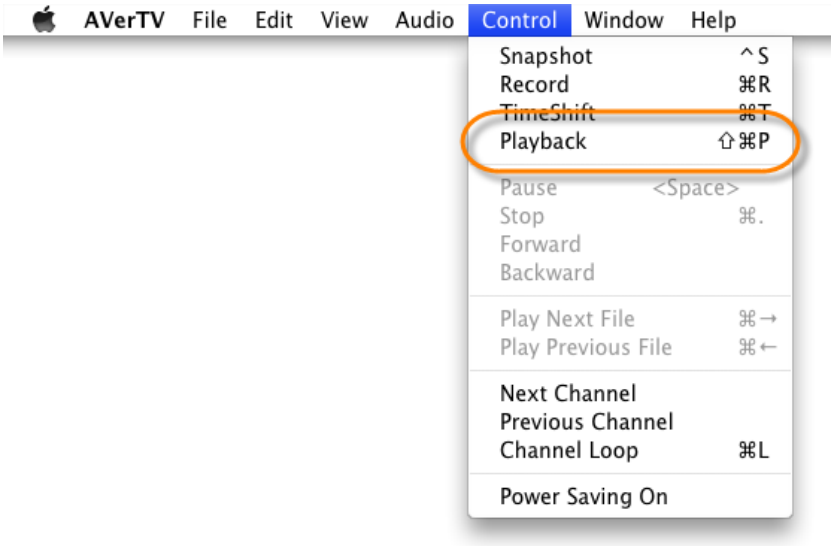

Playback

Play back recorded video files.

Continue/Pause

Play/Pause (for playback, recording, and TimeShift).

Stop

Stop the playback, recording, TimeShift, or Channel Preview. Exit full screen back to normal view.

Forward

Press to fast forward.

Backward

Press to rewind.

Play Next File

Play the next file in the playlist.

Play Previous file

Play the previous file in the playlist.

The Playback Seek slide bar will hide automatically after the mouse idles for 3 seconds.

You can also drag the video file directly to the AVerTV for Mac dock icon or the Video Window to play the video file immediately.

OR,

Playback from the Media Box

If you want to open or customize the **Video** or **Audio** playlist, do the followings:

1. Point to menu **File>Open Playlist** to open the **Video** and **Audio** playlists.

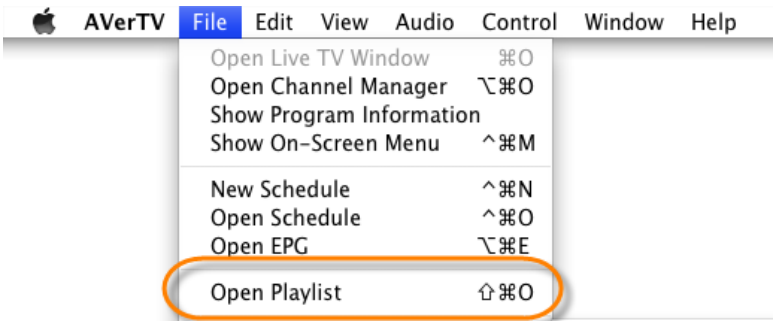

OR,

1. Open the **Media Box.** Then click on the **Video** or **Audio** playlist icon.

2. Click the play button or double-click on the selected file to start playback.

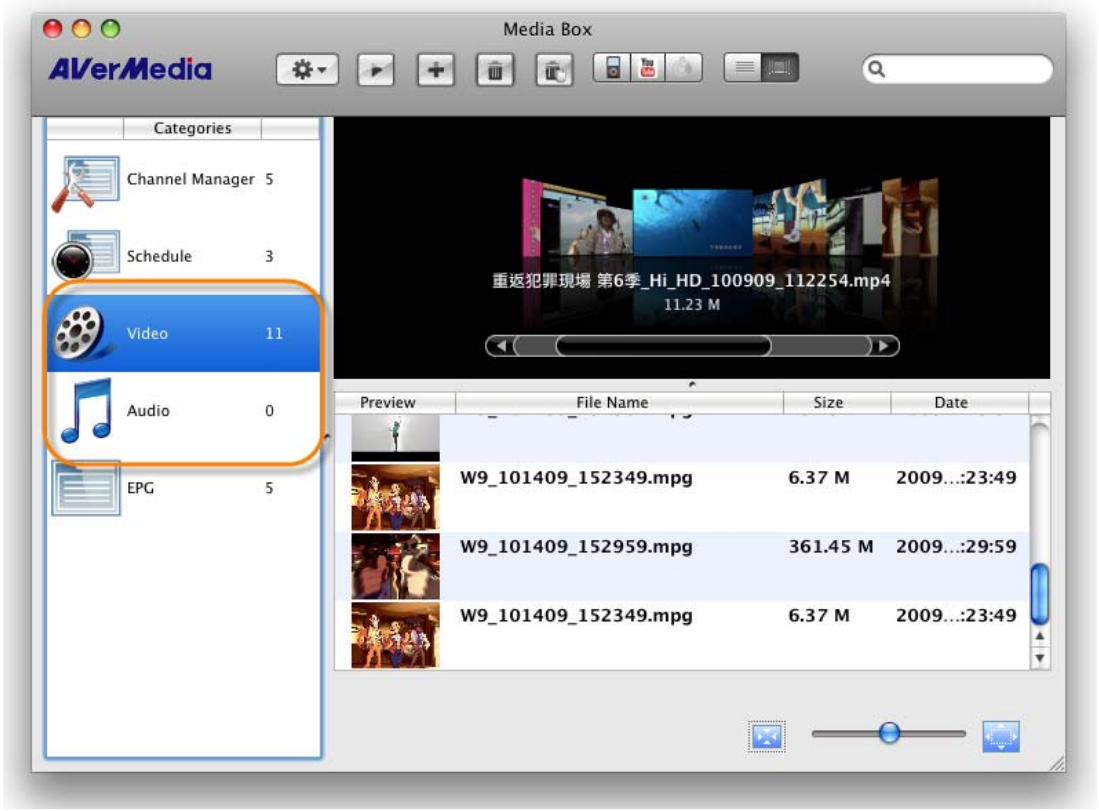

3. Click the button to add a supported media file into the playlist.

4. Click the button to delete the selected files from the playlist.

5. Click the button to delete all files from the playlist.

6. Click the button to switch between **List View** and **Cover Flow** display modes.

   Please note the **Cover Flow** mode is only supported in Leopard system or above.

You can change the size of the file icon by dragging the slider bar under the window .

button contains more functions:

Rename: To change the selected file name.

Show in Finder: Use Finder to open the folder where the files are located. To add the files in Finder to the playlist, drag them to the video/audio playlist in the Media Box or to the AVerTV for Mac icon in the Dock.

Setting Playback Repeat Mode

To set the repeat mode for playback recorded files:

1. In the **Preferences** pane, click the **General**

icon.

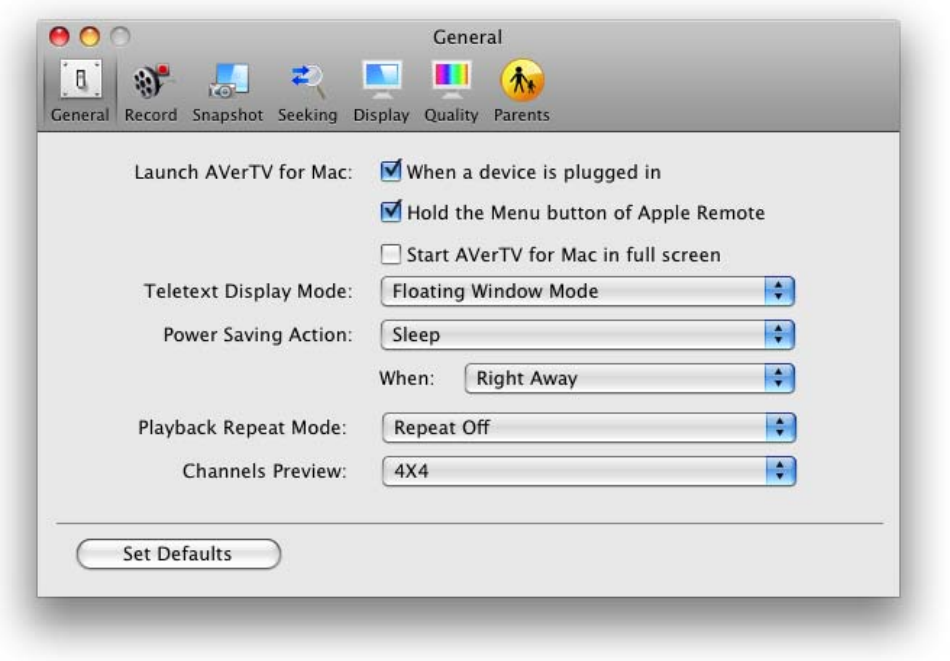

2. From **Playback Repeat Mode** section, select a repeat mode.

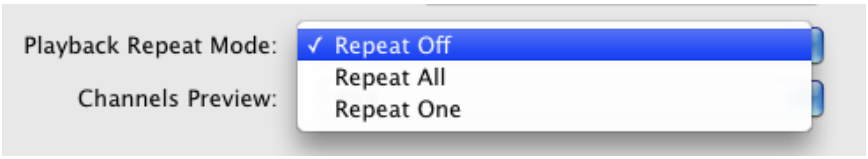

- Repeat Off: Do not repeat.
- Repeat All: Repeat all files in the playlist.
- Repeat One: Repeat the selected single file in the playlist or the currently playing file.

Adjusting the seeking interval time

You can set the jump interval seconds to backward or forward. The minimum value is 10 seconds and the maximum value is 60 seconds.

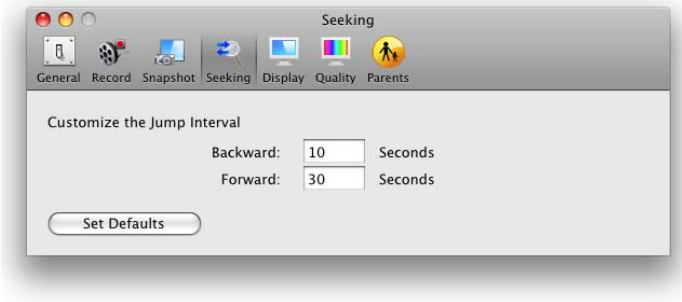

Exporting Video and Audio Files

You can export your video or audio files in the playlist to iPod format, send them to Toast or upload them YouTube website to share with your friends or others.

Export to iPod Format

To export files to iPod format (.m4v), please do the below steps:

1. Open the **Media Box**. In the **Video** or **Audio** playlist, select one or more files for exporting.
2. Click **Export to iPod** button to convert the selected file(s) to iPod compatible format.
3. The **Export…** progress bar then appears. To stop the current exporting item, click on the **Stop** icon on the progress bar.

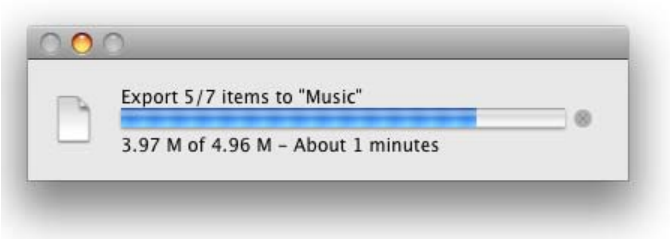

4. After conversion, the files are exported to the Playlists in your iTunes on Mac.

Or, right click on the selected file(s). Choose **Export to iPod** in the pop-up menu.

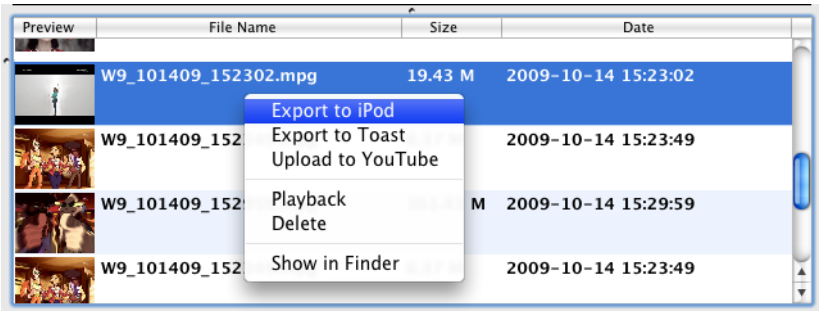

Or, select the file(s) for exporting. Point to menu **File>Export>Export to iPod**.

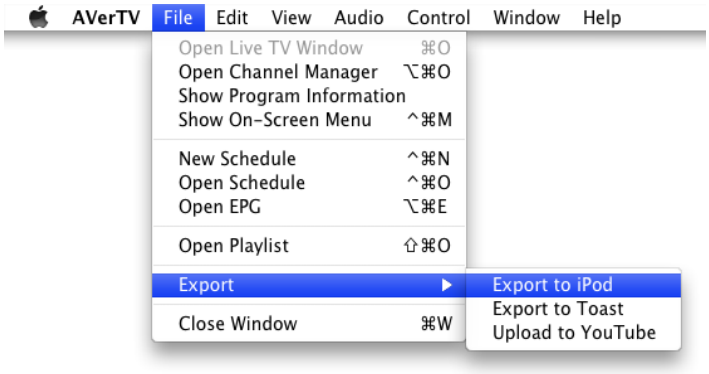

Export to Toast

Toast is a media software allowing you to burn your music, video and others on to CDs, DVDs, and HD-DVDs, copy disks, capture songs, and so on. To export your video and audio files to Toast, please do the below steps:

1. Open the **Media Box**. In the **Video** playlist, select one or more files (in MPEG-2 format) for exporting.

2. Click the **Export to Toast** button to export the selected file(s) to Toast.

OR,

In the playlist, right click on the selected file(s). Choose **Export to Toast**.

OR,

Select the file(s) for exporting. Point to menu **File>Export>Export to Toast**.

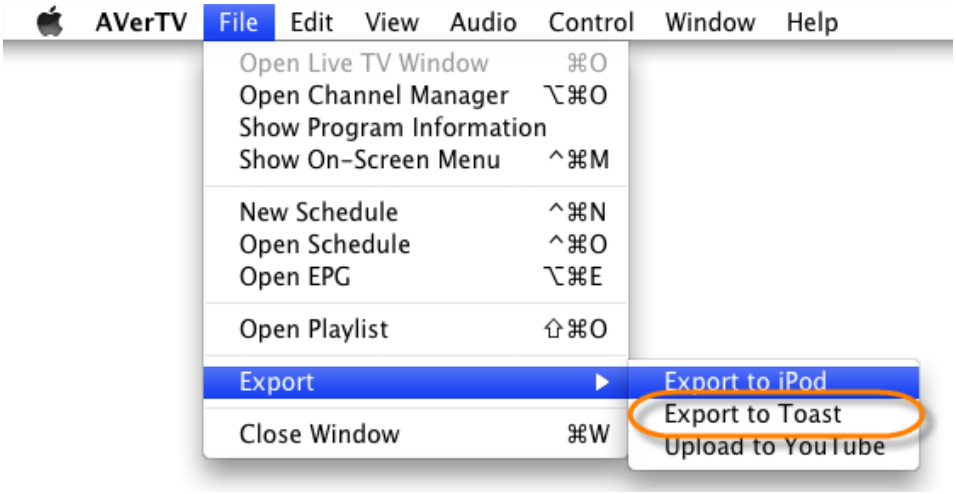

Upload to YouTube

To upload video files to YouTube, a website that allows users to upload, view and share video clips, please do the below steps:

1. Open the **Media Box**. In the **Video** playlist, select one or more files for exporting.
2. Click the **Upload to YouTube** button to upload the selected file(s) to YouTube.
3. After the **Upload Video(s) to YouTube** window pops up, please enter your YouTube user account and password. (You must first sign up for a YouTube membership to upload video files. If you don't have an account, please create one first.)
   Select **Sign In** to continue or **Cancel** to abort.

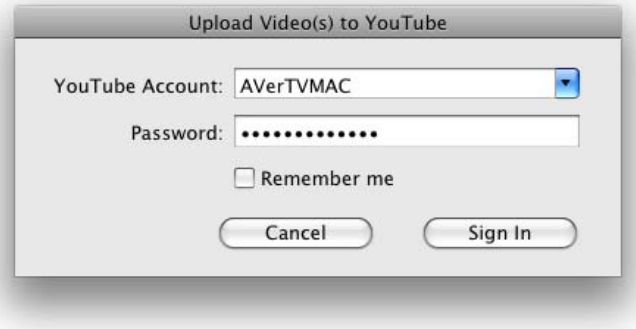

4. Provide all required information about the video file you are uploading now.
   Introduce your video content in **Description** section.
   Give some relevant keywords for searching in **Tags** section.

Select the **Private** checkbox if the video is personal and can be viewed only from your account or other authorized ones.

If you want to change your account, please click the **Change** Change button on the upper right corner.

5. Choose **Next** to proceed or **Cancel** to abort the action.

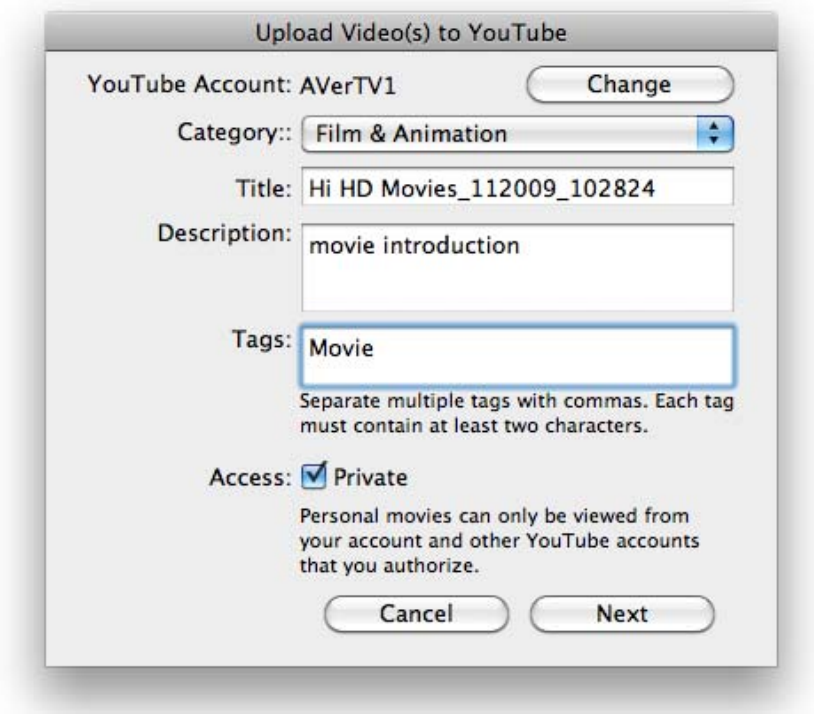
Upload Video(s) to YouTube
YouTube Account: AVerTV1
Change
Category:: Film & Animation
Title: Hi HD Movies_112009_102824
Description: movie introduction
Tags: Movie
Separate multiple tags with commas. Each tag must contain at least two characters.
Access: Private
Personal movies can only be viewed from your account and other YouTube accounts that you authorize.
Cancel
Next

6. Read through the Copyright and Disclaimers. Select the checkbox if you agree. Click the **Upload** button to continue.

Upload Video(s) to YouTube
Copyright and Disclaimers
Max file size: 2GB, Max length: 10 minutes
Do not upload copyrighted, obscene or any other material which violates the YouTube Terms of Use. By clicking "Continue", you are representing that this video does not violate the YouTube Terms of Use and that you own all copyrights in this video or have express permission from the copyright owner (s) to upload it.
Do not upload any TV shows, music videos, music concerts or commercials without permission, unless they consist entirely of content you created yourself.
I have read the above statement and I confirm that I have the copyright of the video and the background music I am about to upload YouTube.
Cancel
Go back
Upload

7. Then uploading begins, and the **Export…** progress bar appears.

OR,

In the playlist, right click on the selected file(s). Choose **Upload to YouTube**.

OR,

Select the file(s) for uploading. Point to menu **File>Export>Upload to YouTube**.

Picture-in-Picture Display

With the picture-in-picture (PIP) window feature, you will be able to play back recorded video files, and, at the same time, watch live TV.

1. To enable the PIP function, point to menu **View>Picture in Picture.**

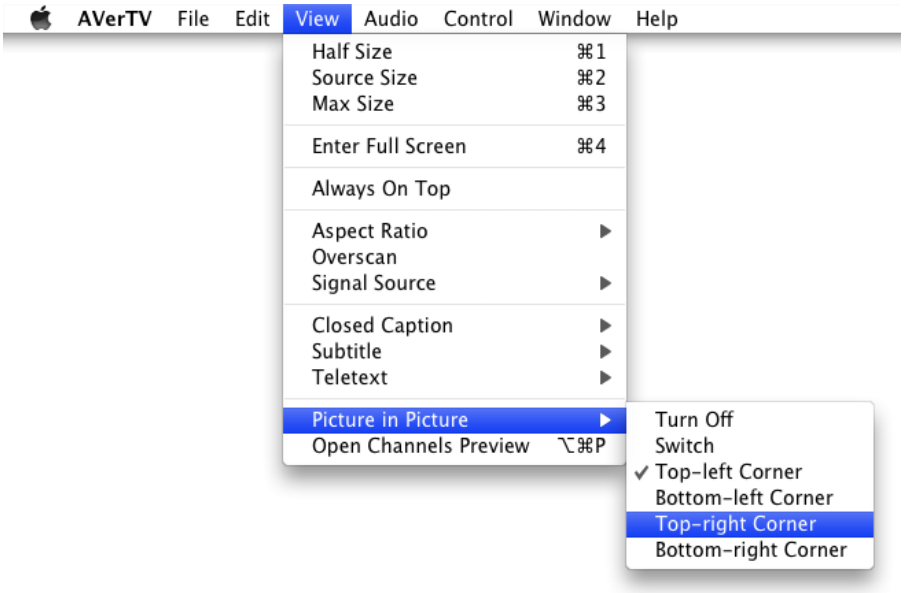

2. Choose a desired position of the PIP window.
3. Select **Turn on** to enable and **Turn Off** to disable the PIP function.

Position	Description
Top-left Corner	Display the PIP window on the top-left corner
Bottom-left Corner	Display the PIP window on the bottom-left corner
Top-right Corner	Display the PIP window on the top- right corner
Bottom-right Corner	Display the PIP window on the bottom-right corner
Free	Resize the PIP window and separate it from the main window

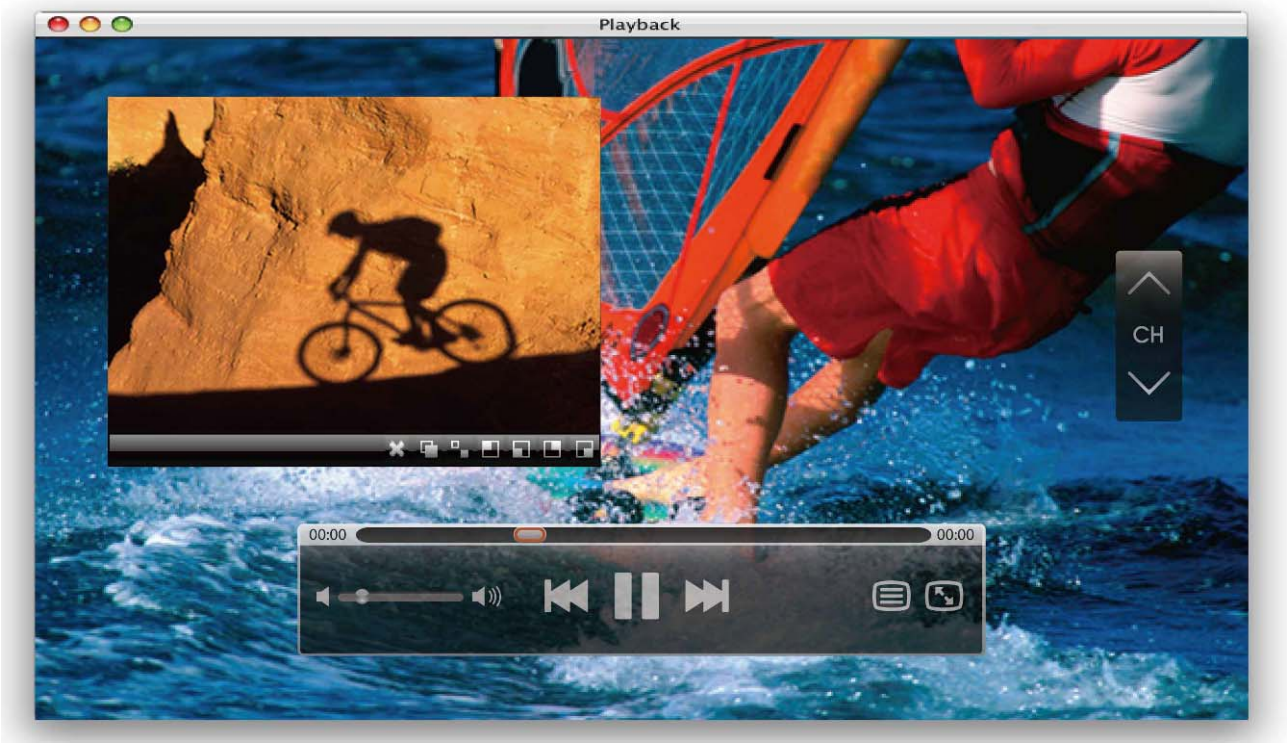

By default, you will be able to play back recorded video files on the main window, and at the same time, watch live TV in the PIP window. If you want to switch the video playback to the PIP window and the live TV to the main window, press the button. To exit from the PIP window, press button.

Image Capture

While you watch TV or a recorded video on your Mac monitor, you can use the **AVerTV for Mac** application to capture images for your documents, presentations or web pages. Before you start capturing images, first set the destination folder for saving captured images.

Capture a TV/Video Image

Using Menu Bar Controls

1. Point to the menu **Control>Snapshot** to start the capturing.

Multiple Image Sequence Capture

To capture a continuous sequence of images, do the followings:

1. Click the **Snapshot**

icon in the **Preferences** pane.

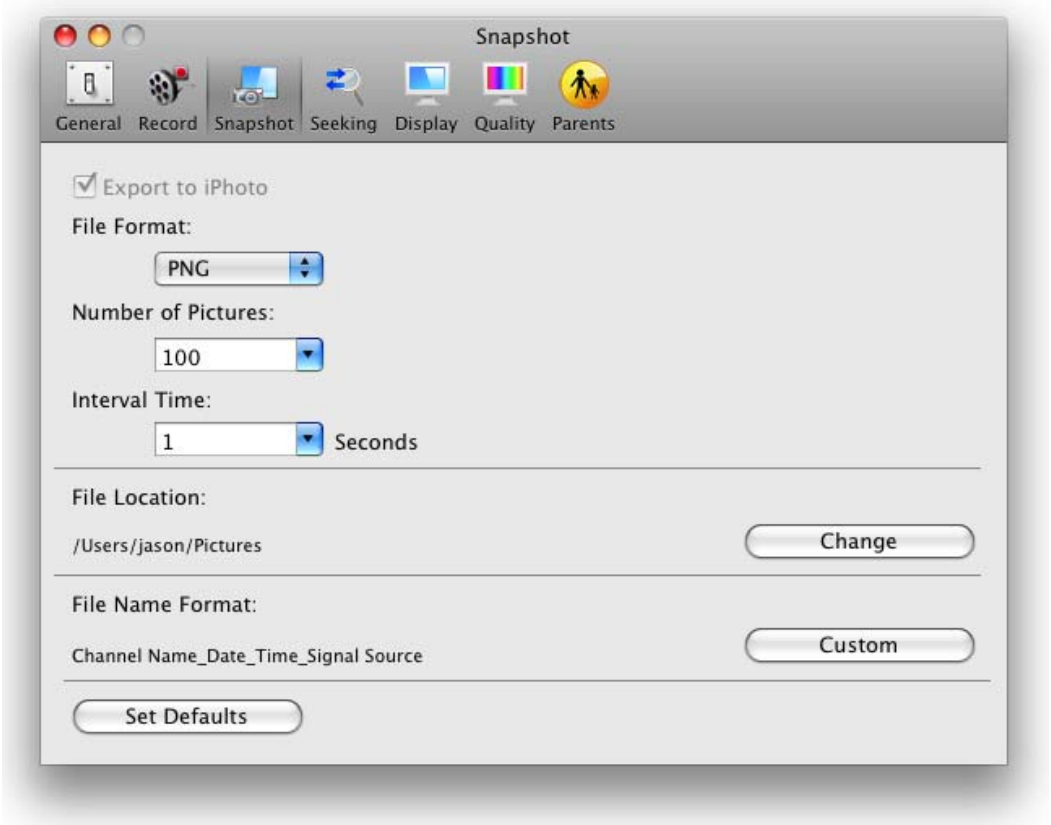

2. Select the **Export to iPhoto** checkbox to save the captured image file to the assigned location and export it to the iPhoto.
3. From the **File Format** drop-down menu, select the format for saving the captured image. There are 4 options in the **Format** list:
   - PNG
   - BMP
   - JPEG
   - TIFF
4. In the **Number of Pictures** box, specify how many images you want to capture at a time.
5. In the **Interval Time** box, specify the interval between captures. For instance, if you specify 10 seconds, an image will be captured every 10 seconds.
6. To determine the **File Location** destination folder for saving captured images, click **Change**.
7. To create your own file name format, click **Custom** in the **File Name Format**.

Click **Custom** button in the **File Name Format** section to custom the capture file name, you can preview the file name format from the **Preview** section.

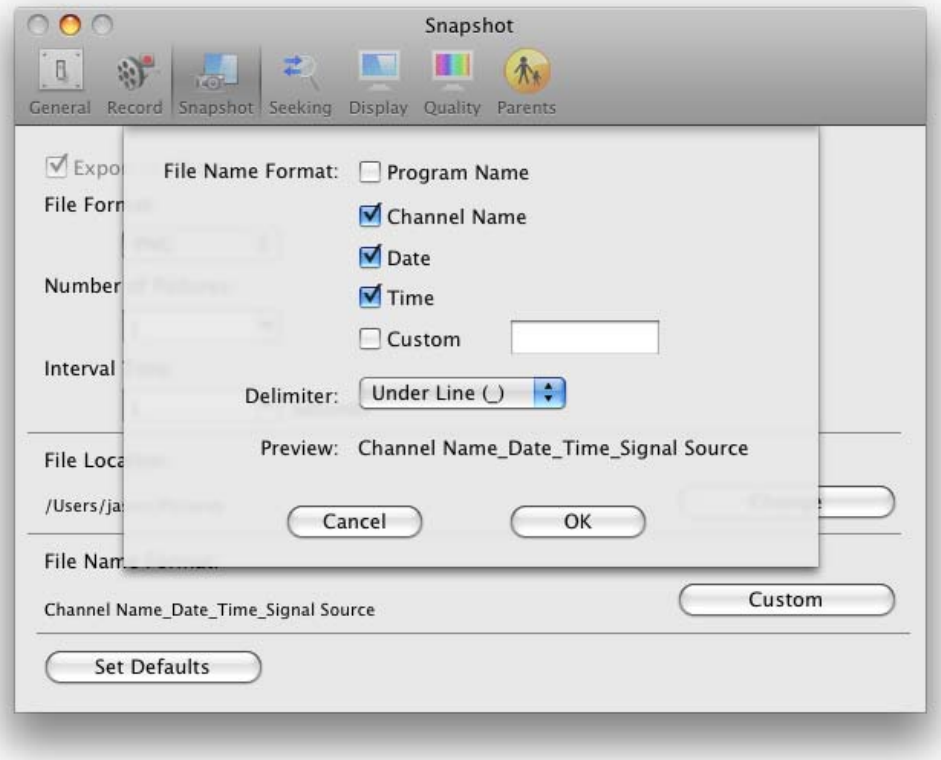

Other Settings

Other Ways to Launch AVerTV for Mac

You can set to launch AVerTV for Mac by plugging device or holding the MENU button of the Apple Remote.

1. In the **Preferences** pane, click on the **General**

icon.

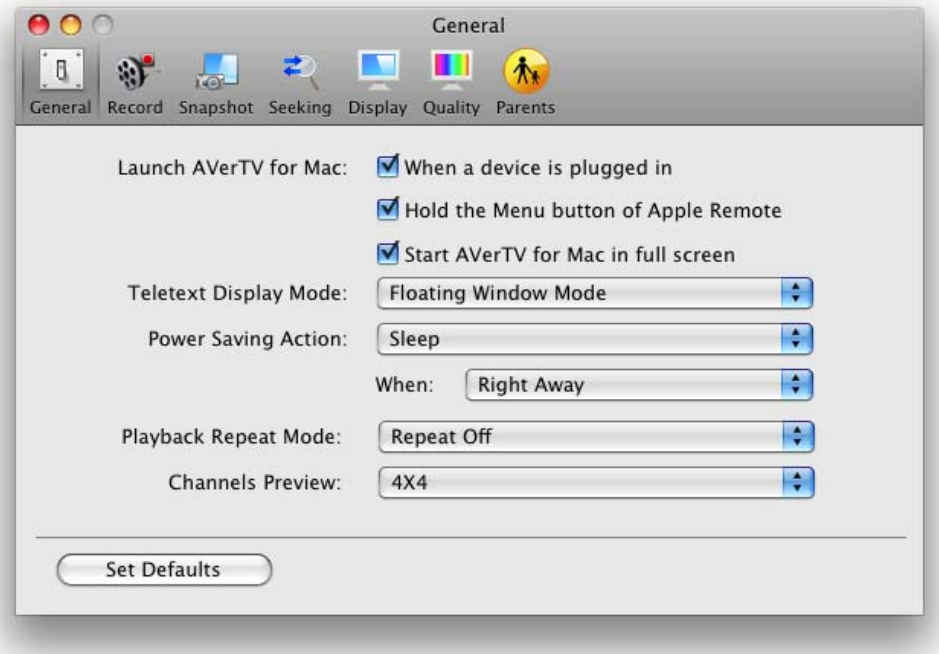

2. If you want to launch AVerTV for Mac every time when you plug the device, check the **When a device is plugged in** option in **Launch AVerTV for Mac** section.
   To launch AVerTV for Mac by pressing the **MENU** button of Apple Remote, check the **Hold the Menu button of Apple Remote** option.
   If you want to launch the application in full-screen mode every time, check the option **Start AVerTV for Mac in full screen**.

Power Options

This option allows you to exit the application and put your Mac into log off or sleep mode, or shut down your Mac while you are away.

1. In the **Preferences** pane, click on the **General** icon.

2. Select a power saving action in the **Power Saving Action** section.

3. Then choose an execution time.

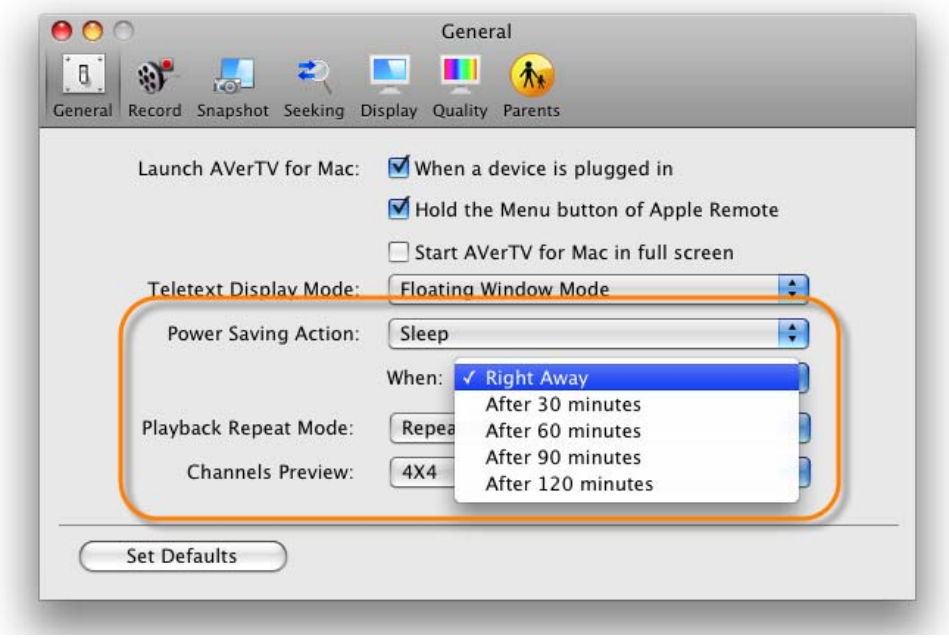

4. Point to the menu **Control>Power Saving On.**

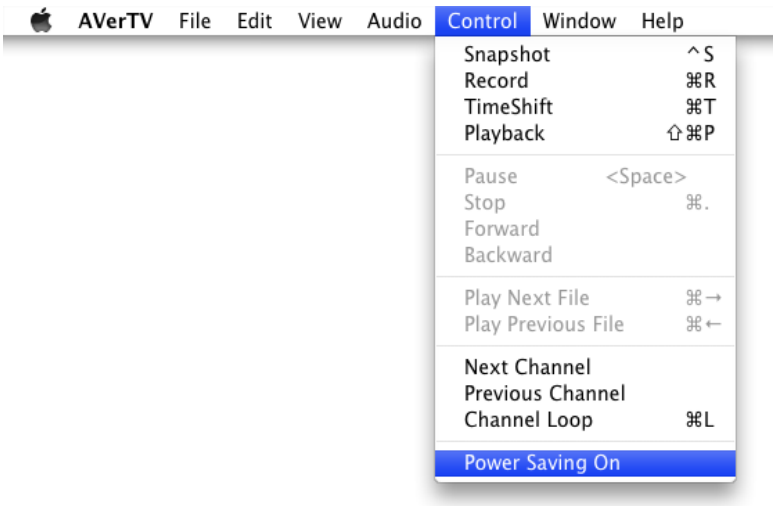

For details, please see the descriptions below.

Time setting mode	Description
Right Away	Your computer goes into the selected mode in about 10 seconds.
After 30/60/90/120 Minutes	Your computer goes into the selected mode in 30/60/90/120 minutes.

If you want to clear the countdown timer, point to the menu **Control>Power Saving Off.**

Application Information

To see application version and other information about the AVerTV for Mac software, point to menu **AVerTV>About AVerTV for Mac**.

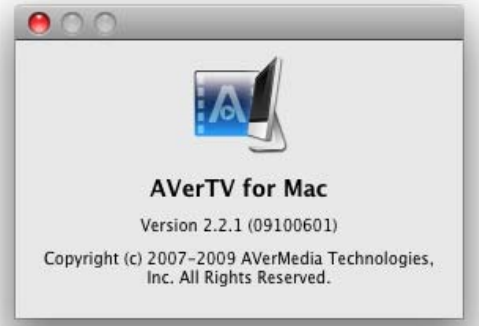

Customer Support

If you need to more support and information, you can link to the local AVerMedia webpage.

1. Point to menu **AVerTV>Link To**.

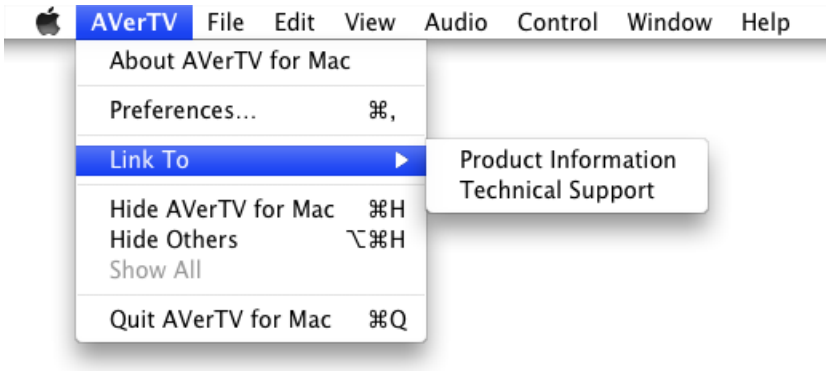

2. Select **Product Information** to link to the web page about product information. Select **Technical Support** to open the support webpage. Please make sure that you have already connected to the Internet.

Teletext

Teletext makes TV viewing a unique experience. It views Teletext broadcast from your television programs offering the most updated information on TV Schedules, News, Stock Market Prices, Concert & Theatre information and so on. Teletext information may not be

available if there is no such service provided in your area. Not only Preview mode but also Record and TimeShift modes support Teletext display.

Teletext Controls

You can find Teletext option in menu **View>Teletext**. And use keyboard to key in the Teletext page number to switch into the desired Teletext page.

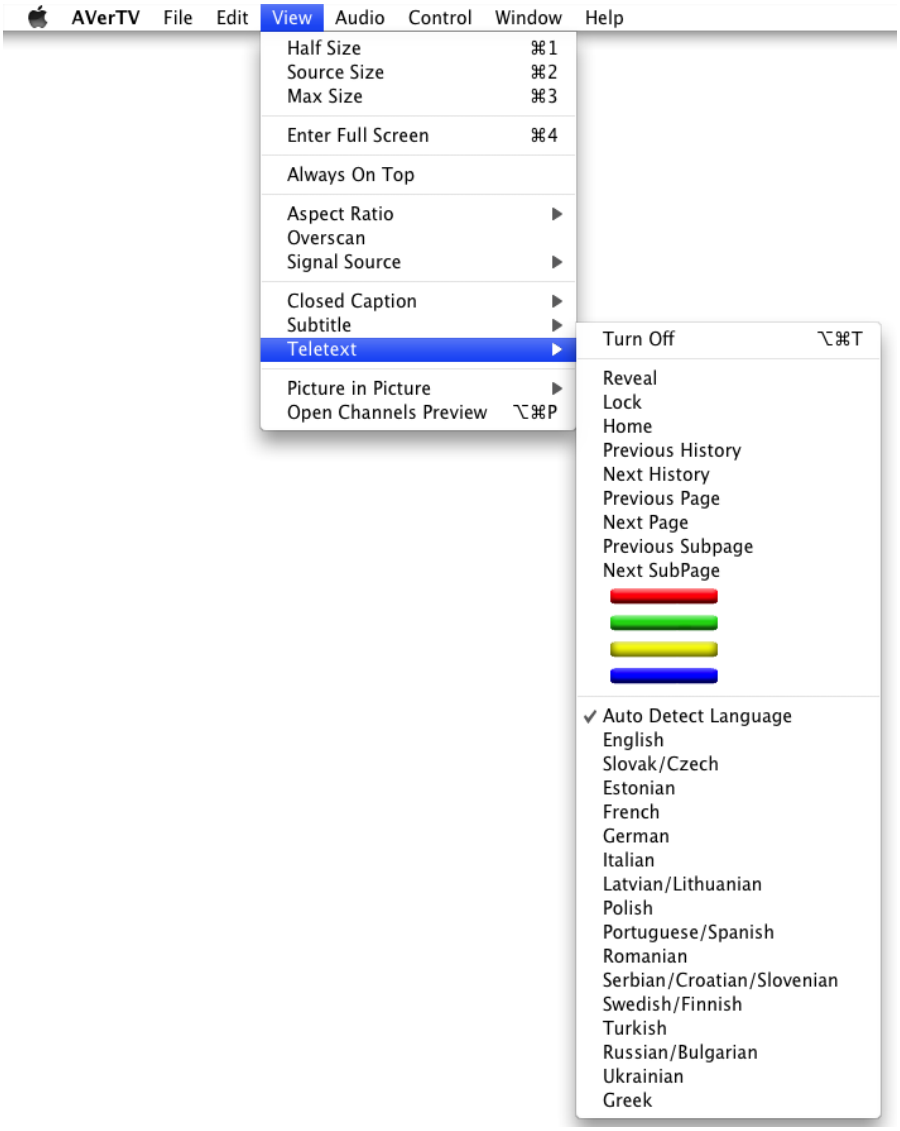

Turn On/Turn Off

If Teletext is not selected, click **Turn On** to view the Teletext information.

Reveal

Select the Reveal to reveal a hidden answer.

- **Lock**

Lock the current subpage. The upcoming transmitted sub pages will be stored in the Teletext Cache for later use.

- **Home**

Go to the page 100 of Teletext home page, but page 100 may not be the primary Teletext source.

- **Previous History**

Retrieve the previous page in the history list. The command is usable after one or more back steps in the history list.

- **Next History**

Move a page forward in the history list. The command is usable after one or more back steps in the history list.

- **Previous Page**

Switch to the previous subpage.

- **Next Page**

Switch to the next subpage.

- **Previous Subpage**

Switch to the previous sub page.

- **Next Subpage**

Switch to the next sub page.

- **(Red)**

Jump to the Teletext page which the red color corresponds to.

- **(Green)**

Jump to the Teletext page which the green color corresponds to.

- **(Yellow)**

Jump to the Teletext page which the yellow color corresponds to.

- **(Blue)**

Jump to the Teletext page which the blue color corresponds to.

- **Auto detect Language**

Select to auto detect the language according to your region. Or you can select the desired Teletext language directly.

Teletext Mode

There are two types of Teletext modes: Window mode and Overlay mode. To select a desired Teletext mode:

1. Click the **General**

icon in the **Preferences** pane.
2. Select a desired mode from the Teletext Display drop-down menu.

- **Floating Window mode:**

To open a new Teletext window, point to **View>Teletext>Turn On.**

Retrieve the previous page in the history list. The command is usable after one or more back steps in the history list.

Move a page forward in the history list. The command is usable after one or more back steps in the history list.

Go to the page 100 of Teletext home page, but page 100 may not be the primary Teletext source.

Switch to the previous page.

Switch to the next page.

Switch to the previous sub page.

Switch to the next sub page.

Stop refreshing data.

Search the keyword in the Teletext content.

Overlay mode:

In Overlay mode, Teletext window will overlay on the TV monitor. To adjust the transparent level of the Teletext:

1. Click on the **Display**

icon in the **Preference** pane.
2. Click **Others** button.

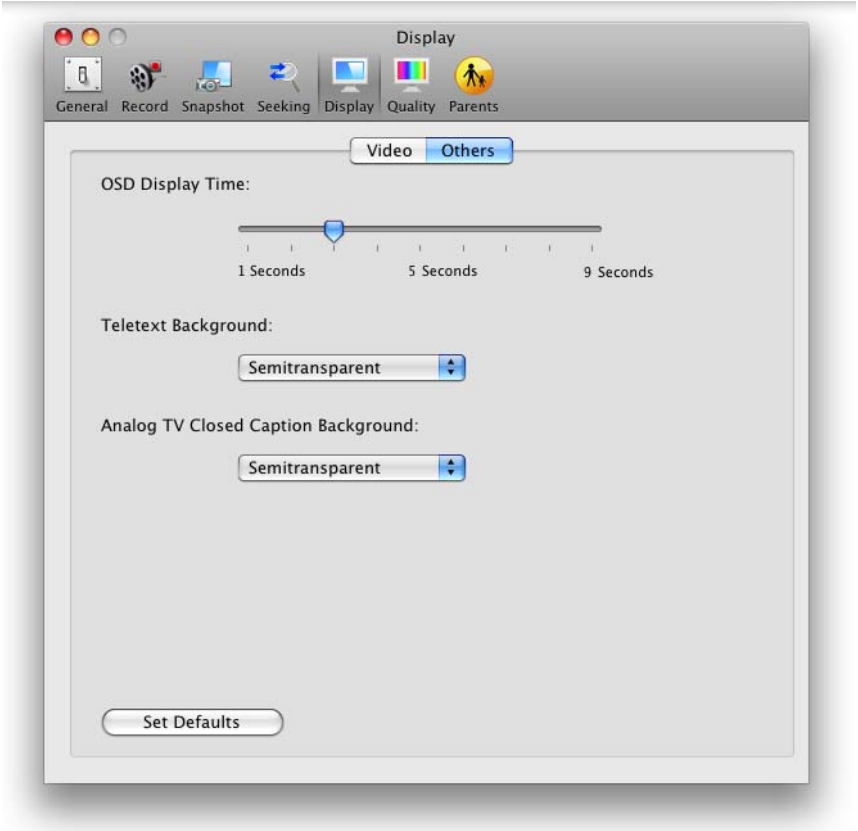

3. Click the drop-down menu in **Teletext Background** to set the Teletext background color as **Transparent**, **Semitransparent** or **Opaque**.

You can see the difference from the pictures below:

Transparent

AVerMedia A815
100 PHOENIX Sa 20.03.04 08:21'58
PHOENIX
Der Ereignis- und Dokumentationskanal
Inhalt 101-104
Aktuelles 110/200
Programm 300
Übersicht Radio/Rundfunk 480
Phoenix 500
Programmbegleitung 600
Service 800
Programmänderung ... 330
seit 08.15 Helmut Kohl - ein deutscher Kanzler (1/2) 601
ab 09.00 Helmut Kohl - ein deutscher Kanzler (2/2) 602

opaque

AVerMedia A815
100 PHOENIX Sa 20.03.04 08:21'58
PHOENIX
Der Ereignis- und Dokumentationskanal
Inhalt 101-104
Aktuelles 110/200
Programm 300
Übersicht Radio/Rundfunk 480
Phoenix 500
Programmbegleitung 600
Service 800
Programmänderung ... 330
seit 08.15 Helmut Kohl - ein deutscher Kanzler (1/2) 601
ab 09.00 Helmut Kohl - ein deutscher Kanzler (2/2) 602

Semitransparent

AVerMedia A815
100 PHOENIX Sa 20.03.04 08:21'58
PHOENIX
Der Ereignis- und Dokumentationskanal
Inhalt 101-104
Aktuelles 110/200
Programm 300
Übersicht Radio/Rundfunk 480
Phoenix 500
Programmbegleitung 600
Service 800
Programmänderung ... 330
seit 08.15 Helmut Kohl - ein deutscher Kanzler (1/2) 601
ab 09.00 Helmut Kohl - ein deutscher Kanzler (2/2) 602

Closed Caption & Subtitle

Closed Caption & Subtitle are systems to display text on a television. AVerTV for Mac supports both of them.

To enable Closed Caption function:

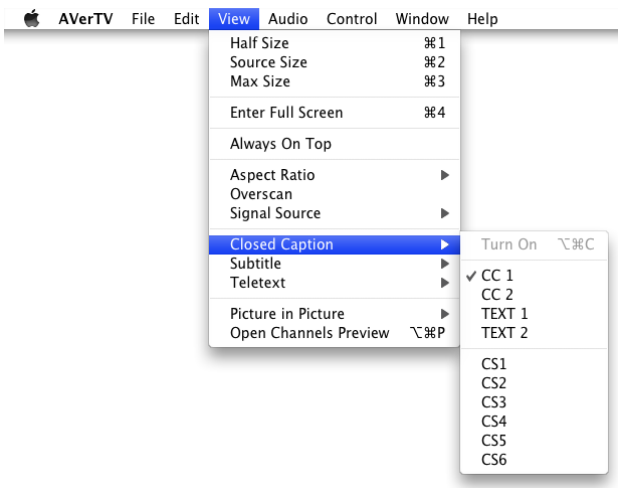

1. Point to the menu **View>Closed Caption.**
2. Select **Turn On** to display the Closed Caption information.
3. Select desired Closed Caption system.

To enable Subtitle function:

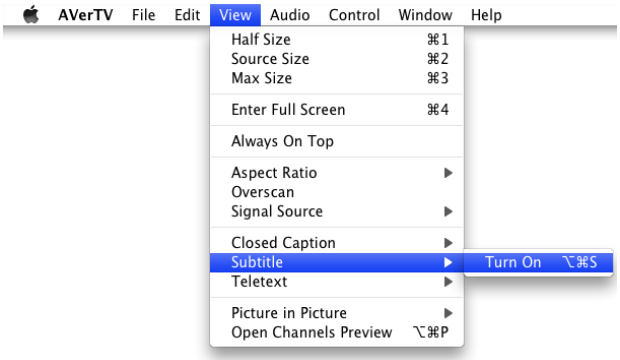

1. Point to the menu **View>Subtitle.**
2. Select **Turn On** to display the subtitle.

Using Apple Remote to Control AVerTV

If the AVerTV for Mac is not launched, you can hold the **MENU** button on Apple Remote to launch the AVerTV for Mac.

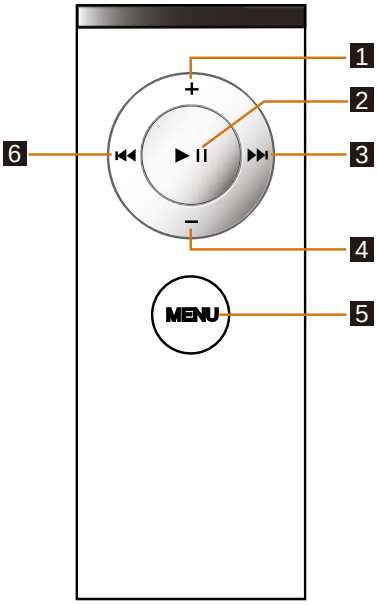

	Preview	On Screen Menu	Timeshift	Teletext Overlay Mode	Playback
1 +	Volume Up	Move the Selection Up	Volume Up	X	Volume Up
2 ▶ ❙❙	Play / Pause	Enter / Execute the Submenu	Play / Pause	X	Play / Pause
3 ▶▶|	Next Channel	Enter the Submenu	Forward	Go to next page	Play Next File / Hold to Fast-forward
4 −	Volume Down	Move the Selection Down	Volume Down	X	Volume Down
5 MENU	Open/Close the On-Screen Menu	Open/Close the On-Screen Menu	Open/Close the On-Screen Menu	Open/Close the On-Screen Menu	Open/Close the On-Screen Menu
6 |◀◀	Previous Channel	Back to Upper Menu	Backward	Go to Previous Page	Play Previous File / Hold to Rewind

Hot Keys

The followings are the default definitions of the hot keys:

Hot Key	Description
AVerTV	
Preferences	⌘,
Hide AVerTV for Mac	⌘H
Hide Others	⌥⌘H
Quit AVerTV for Mac	⌘Q
File	
Add schedule	^⌘N
Open Playlist	⇧⌘O
Open Program management	⌥⌘O
Open Schedule	^⌘O
Close Window	⌘W
Open On Screen Menu	^⌘M
View	
Half Size	⌘1
Source Size	⌘2
Max Size	⌘3
Full Screen	⌘4
Source>Next Source	⇧⌘S
Closed Caption>Turn On	⌥⌘C
Subtitle>Open	⌥⌘S
Teletext>Open	⌥⌘T
EPG	⌥⌘E
Audio	
Add Volume	⌘↑

Sub Volume	⌘↓
Mute	⌥⌘↓
Next Audio Channel	⇧⌘A
Control	
Snapshot	^S
Record	⌘R
Pause	**Space**
Stop	⌘.
Forward	→
Backward	←
Playback	⇧⌘P
Play Next File	⌘→
Play Previous file	⌘←
Next Channel	↑
Previous Channel	↓
Channel Loop	⌘L
Channels Preview>Open/Close	⌥⌘P
Window	
Hide Control Panel	^C
Select Control Panel>Horizontal Panel	⇧⌘H
Select Control Panel>Vertical Panel	⇧⌘V
Select Control Panel>Combined Panel	⇧⌘C